# 25
# 27
# *MULTIMETER*

Service Manual

FLUKE®

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_09359

# 25
# 27
# *MULTIMETER*

## Service Manual

P/N 738138
October 1984
©1984 John Fluke Mfg. Co., Inc., all rights reserved. Litho in U.S.A.

FLUKE®

Pozidriv is a registered trademark of Phillips Screw Company
Teflon is a registered trademark of E.E. Dupont DeNemours & Co.

# Table of Contents


| SECTION | TITLE | PAGE |
|---|---|---|
| 1 | **INTRODUCTION** | **1-1** |
| | 1-1. INTRODUCTION | 1-1 |
| | 1-2. SPECIFICATIONS | 1-1 |
| | 1-3. OPERATING INSTRUCTIONS | 1-1 |
| 2 | **THEORY OF OPERATION** | **2-1** |
| | 2-1. INTRODUCTION | 2-1 |
| | 2-2. FUNCTIONAL DESCRIPTION | 2-1 |
| | 2-3. BLOCK DIAGRAM DESCRIPTION | 2-1 |
| | 2-4. Input Overload Protection | 2-1 |
| | 2-5. Function Switching Circuits | 2-1 |
| | 2-6. Signal Conditioning Circuits | 2-2 |
| | 2-7. Custom Analog IC (U1) | 2-2 |
| | 2-8. Peripherals to U1 | 2-4 |
| | 2-9. Microcomputer Control | 2-4 |
| | 2-10. Display | 2-5 |
| 3 | **MAINTENANCE** | **3-1** |
| | 3-1. INTRODUCTION | 3-1 |
| | 3-2. SERVICE INFORMATION | 3-1 |
| | 3-3. OPERATOR MAINTENANCE | 3-1 |
| | 3-4. Battery Replacement | 3-1 |
| | 3-5. Fuse Test | 3-2 |
| | 3-6. Fuse Replacement | 3-2 |
| | 3-7. GENERAL MAINTENANCE INFORMATION | 3-3 |
| | 3-8. Handling Precautions For Static-Sensitive Devices | 3-3 |
| | 3-9. Disassembly | 3-3 |
| | 3-10. Reassembly | 3-5 |
| | 3-11. Cleaning | 3-6 |
| | 3-12. PERFORMANCE TEST | 3-6 |
| | 3-13. Display Test | 3-7 |
| | 3-14. Voltage Functions Performance Verification | 3-7 |
| | 3-15. AC and DC Current Performance Verification | 3-7 |
| | 3-16. Ohms Function Performance Verification | 3-8 |
| | 3-17. Diode Test Performance Verification | 3-8 |




*(continued on page ii)*

| SECTION | TITLE | PAGE |
|---|---|---|
| | 3-18. CALIBRATION ADJUSTMENT | 3-9 |
| | 3-19. Calibration Preparation | 3-9 |
| | 3-20. DC Voltage Calibration | 3-9 |
| | 3-21. AC Voltage Calibration | 3-10 |
| | 3-22. TROUBLESHOOTING | 3-10 |
| | 3-23. Power-Up Self Test | 3-10 |
| | 3-24. Overall System Check | 3-10 |
| | 3-25. DC Voltage Signal Tracing | 3-11 |
| | 3-26. Fault Diagnosis Guide | 3-12 |
| **4** | **LIST OF REPLACEABLE PARTS** | **4-1** |
| | TABLE OF CONTENTS | 4-1 |
| | 4-1. INTRODUCTION | 4-2 |
| | 4-2. HOW TO OBTAIN PARTS | 4-2 |
| **5** | **SCHEMATIC DIAGRAMS** | **5-1** |

# List of Tables


| TABLE | TITLE | PAGE |
|---|---|---|
| 1-1. | Specifications | 1-1 |
| 3-1. | Recommended Test Equipment | 3-2 |
| 3-2. | Ohms Function Performance Test | 3-8 |
| 3-3. | Fault Diagnosis Guide | 3-11 |

# List of Illustrations


| FIGURE | TITLE | PAGE |
|---|---|---|
| 2-1. | Overall Functional Block Diagram | 2-2 |
| 2-2. | A/D Conversion Elements and Waveform | 2-3 |
| 2-3. | Digital Circuitry Within U1 | 2-4 |
| 3-1. | Battery and Fuse Replacement | 3-2 |
| 3-2. | Disassembly | 3-4 |
| 3-3. | Switch Extension Shaft Installation | 3-5 |
| 3-4. | Calibration Adjustment Locations | 3-9 |

# Section 1
# Introduction and Specifications

## 1-1. INTRODUCTION

This manual presents service information for the Fluke 25 and 27 Multimeters. Included are a theory of operation, general maintenance procedures, performance tests, calibration procedures, troubleshooting information, a list of replaceable parts, and a schematic diagram.

## 1-2. OPERATING INSTRUCTIONS

For operating instructions, refer to the Operator's Manual provided with the instrument at time of purchase.

## 1-3. SPECIFICATIONS

Instrument specifications are presented in Table 1-1.

## SPECIFICATIONS

**Table 1-1. Specifications**

| FUNCTION | RANGE | RESOLUTION | ACCURACY | | |
|---|---|---|---|---|---|
| ⎓ V | 3.200V<br>32.00V<br>320.0V<br>1000V | 0.001V<br>0.01V<br>0.1V<br>1V | ±(0.1%+1)<br>±(0.1%+1)<br>±(0.1%+1)<br>±(0.1%+1) | | |
| ⎓ mV | 320.0 mV | 0.1 mV | ±(0.1%+1) | | |
| Ω<br>(nS) | 320.0Ω<br>3.200 kΩ<br>32.00 kΩ<br>320.0 kΩ<br>3.200 MΩ<br>32.00 MΩ<br>32.00 nS | 0.1Ω<br>0.001 kΩ<br>0.01 kΩ<br>0.1 kΩ<br>0.001 MΩ<br>0.01 MΩ<br>0.01 nS | ±(0.3%+2)<br>±(0.2%+1)<br>±(0.2%+1)<br>±(0.2%+1)<br>±(0.2%+1)<br>±(1%+1)<br>±(2%+10) | | |
| ⦀ ⇥ | 2.080V | 0.001V | ±(1%+1) typical | | |
| | | | 40 Hz-2 kHz | 2 kHz-10 kHz | 10 kHz-30 kHz |
| ~ V | 3.200V<br>32.00V<br>320.0V<br>1000V | 0.001V<br>0.01V<br>0.1V<br>1V | ±(0.5%+3)<br>±(0.5%+3)<br>±(0.5%+3)<br>±(1%+3) | ±(2%+3)<br>±(2%+3)<br>±(2%+3)<br>±(3%+3) | ±(4%+10)<br>±(4%+10)<br>±(4%+10)<br>Not Specified |
| ~ mV | 320.0 mV | 0.1 mV | ±(0.5% +3) | ±(2%+3) | ±(4%+10) |

| FUNCTION | RANGE | RESOLUTION | ACCURACY | TYPICAL BURDEN VOLTAGE |
|---|---|---|---|---|
| ⎓ mA/A | 32.00 mA<br>320.0 mA<br>10.00A | 0.01 mA<br>0.1 mA<br>0.01A | ±(0.75%+2)<br>±(0.75%+2)<br>±(0.75%+2) | 5.6 mV/mA<br>5.6 mV/mA<br>50 mV/A |
| ⎓ μA | 320.0 μA<br>3200 μA | 0.1 μA<br>1 μA | ±(0.75%+2)<br>±(0.75%+2) | 0.5 mV/μA<br>0.5 mV/μA |
| ~ mA/A<br>40-1000 Hz | 32.00 mA<br>320.0 mA<br>10.00A | 0.01 mA<br>0.1 mA<br>0.01A | ±(1.5%+2)<br>±(1.5%+2)<br>±(1.5%+2) | 5.6 mV/mA<br>5.6 mV/mA<br>50 mV/A |
| ~ μA<br>40-1000 Hz | 320.0 μA<br>3200 μA | 0.1 μA<br>1 μA | ±(1.5%+2)<br>±(1.5%+2) | 0.5 mV/μA<br>0.5 mV/μA |

| FUNCTION | OVERLOAD PROTECTION | INPUT IMPEDANCE (nominal) | COMMON MODE REJECTION RATIO (1 kΩ unbalance) | NORMAL MODE REJECTION |
|---|---|---|---|---|
| ⎓ V | 1000V rms | 10 MΩ in // with <100 pF | >120 dB at dc, 50 Hz, or 60 Hz | >60 dB at 50 Hz or 60 Hz |
| ⎓ mV | 500V rms | 10 MΩ in // with <100 pF | >120 dB at dc, 50 Hz, or 60 Hz | >60 dB at 50 Hz or 60 Hz |
| ~ V | 1000V rms<br>($10^7$ V-Hz max) | 10 MΩ in // with <100 pF<br>(ac coupled) | >60 dB, dc to 60 Hz | |
| ~ mV | 500V rms<br>($10^7$ V-Hz max) | 10 MΩ in // with <100 pF<br>(ac coupled) | >60 dB, dc to 60 Hz | |
| Ω | 500V rms | OPEN CIRCUIT TEST VOLTAGE | FULL SCALE VOLTAGE | |
| | | | Up to 3.2 MΩ | 32 MΩ or nS |
| | | <2.8V dc | <420 mV dc | <1.3V dc |

Basic electrical accuracy is specified from 18°C to 28°C with relative humidity up to 95%, for a period of one year after calibration. All ac conversions are ac coupled, average responding, and calibrated to read the true rms value of a sine wave input. Accuracy is specified as ±([% of reading] + [number of least significant digits]).

Ranging is either automatic or manual in all functions with more than one range. Test resistance below approximately 150Ω in the ⦀ ⇥ function produces a continuous audible tone.

**Table 1-1. Specifications (cont)**

| MAXIMUM VOLTAGE BETWEEN ANY TERMINAL AND EARTH GROUND |
|---|
| 1000V |

| FUNCTION | FUSE PROTECTION |
|---|---|
| mA or μA | 630 mA 250V FAST, 3A 600V FAST |
| A | 20A 600V FAST |

**Digital Display** ..... 3200 counts, updates 2/sec

**Analog Display** ..... 31 segments, updates 25/sec

**Operating Temperature** ..... -15°C to 55°C, to -40°C for 20 minutes when taken from 20°C

**Storage Temperature** ..... -55°C to 85°C

**Temperature Coefficient** ..... 0.1 x (specified accuracy)/°C
(<18°C or >28°C)

**Relative Humidity** ..... 0% to 95% (0°C to 35°C)
0% to 70% (35°C to 55°C)

**Battery Type** ..... 9V, NEDA 1604 or 6F22 or 006P

**Battery Life** ..... 1000 hrs typical

**Shock, Vibration and Water Resistance** ..... Per MIL-T-28800 for a Style A, Class 2 Instrument

**Size (HxWxL)** ..... 2.2 in x 3.75 in x 8 in (5.6 cm x 9.5 cm x 20.3 cm)

**Weight** ..... 1.6 pounds (0.75 kg)

**Safety** ..... Protection Class II per IEC 348 and ANSI C39.5

# Section 2
# Theory of Operation

## 2-1. INTRODUCTION

This section describes how the Fluke 25 and Fluke 27 work. First, a functional description presents an overview of operation. This is followed by a block diagram description, which describes the major circuit functions in more detail. All descriptions apply to both instruments unless specified otherwise. For reference, a detailed schematic diagram is included in Section 5.

## 2-2. FUNCTIONAL DESCRIPTION

A block diagram of the Fluke 25/27 circuitry is shown in Figure 2-1. As this figure shows, the instrument is composed of two major functional sections: the analog section and the digital section. Each section contains one major active component and one or more peripheral circuits. Most analog functions are performed by a custom analog IC (U1) and analog peripherals to U1. Digital functions are performed by a CMOS, 4-bit microcomputer, U2.

The custom analog IC contains the A/D converter, signal conditioning circuits, and the digital control circuitry required for communication with the microcomputer. Although the custom IC is primarily analog, digital circuits provide state machine control for the A/D converter, a read counter for A/D samples, decoding ROMs for analog switch drive, and bus control for communication with the microcomputer.

The microcomputer controls the A/D converter, initiates the range and function switching, formats data for display, and drives the display. The mode push buttons supply input to the microcomputer to initiate various modes. Output from the microcomputer is displayed on the liquid crystal display (LCD).

## 2-3. BLOCK DIAGRAM DESCRIPTION

Each of the blocks in the Figure 2-1 is discussed in the following paragraphs. In many cases, circuit sections are described in greater detail than is shown in the Figure 2-1; therefore, it may be helpful to refer to the schematic located near the back of this manual.

### 2-4. Input Overload Protection

Overload protection for the volts/ohms/diode-test input (J1) is provided by a network of five metal-oxide varistors (RJ1 through RJ5) and two current-limiting resistors (R1 and R2). R2 is a 1-kΩ, 2W fusible resistor that will open if an extremely high energy signal is present.

Two fuses in series provide protection for the mA/μA input (J2) current shunts: a 3A, 600V fuse and a 630 mA, 250V fuse. A single 20A, 600V fuse provides protection for the 10A input (J3) current shunt. In addition, for the μA and mA ranges, a bridge rectifier (U7) and four diodes (CR1, CR2, CR3, CR4) ensure that the fuses (instead of the shunts) open in very high current overload conditions.

Transistors Q1, Q2, and Q11 provide additional overload protection for the millivolt and ohms functions. If sufficient overload voltage is present, the transistors turn on and connect that input to common through limiting resistor R2, thereby protecting the circuitry in U1. A clamp circuit (Q14 and Q15) connected to the volt/ohms/diode-test input through Z1 and C3 provides similar protection for the volts/ohms/diode-test input.

### 2-5. Function Switching Circuits

Input signals are routed from the overload protection circuits to the function switch. The function switch is a rotary switch with two double-sided wafers which provide

the necessary switching to select each of the various functions. In addition, battery voltage is routed through the function switch from the battery voltage regulator to U1, and from U1 to U2.

## 2-6. Signal Conditioning Circuits

Each input signal is routed through signal conditioning circuitry before reaching U1. Input signals received through the volts/ohms/diode-test input (J1) are routed through Z1, a precision resistor network. The resistor network provides precise input scaling for the various voltage ranges, and it provides precision reference resistors for the ohms function. The capacitors in parallel with the various resistors in Z1 are used in the ac voltage functions; the variable capacitors provide calibration adjustment for the high frequency ac ranges.

Current inputs received through the mA/$\mu$A input (J2) and the A input (J3) develop a voltage across shunt resistors R14, R20, and R23 (320 $\mu$A, 32 mA, and 10A respectively). Resistors R9 and R10 comprise a 10:1 divider for the 3200-$\mu$A and 320-mA current ranges.

## 2-7. Custom Analog IC (U1)

The analog-to-digital converter, autorange switching, and most of the remaining active analog circuitry (including additional signal conditioning) are contained in U1, a custom LSI package. Peripherals to U1 include the system clock, the reference voltage regulator for the A/D converter, and some filtering and amplifier stabilization components. U1 also contains digital circuitry for state machine control over the A/D converter phases, a read counter for A/D samples, decoding ROMs for analog switch drive and read counter preset, and registers to store control outputs from the microcomputer.

Analog-to-digital conversion is accomplished within U1 using a modified dual-slope A/D converter circuit, as shown in Figure 2-2. The conversion method in the Fluke 25/27 can be described as a charge-coupled, multiple-slope technique. A series of 10 minor conversions occur every 40 ms (each at 1/10th the desired resolution) without taking time for an autozero phase between the conversions. These minor conversions (or samples, as they are called in the following discussion) occur at a rate of 25 per second, and are used to provide the fast response bar-graph display and fast autoranging.

New samples are taken every 40 ms. Ten samples are summed to produce a full-resolution digital display, with full scale greater than 3200 counts. A 100-ms autozero phase occurs following every 10-sample sequence.

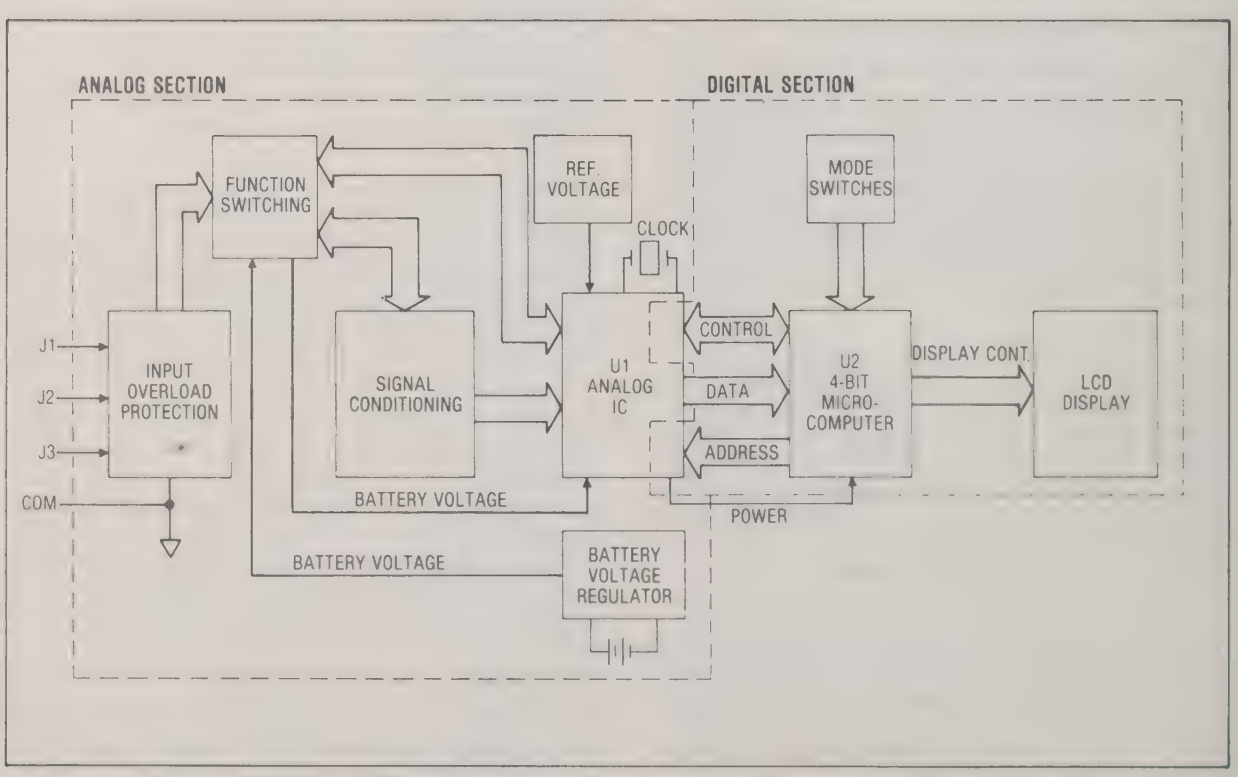


**Figure 2-1. Overall Functional Block Diagram**

Basic A/D conversion elements and waveforms are illustrated in Figure 2-2. As this figure shows, a residual charge is retained by the integrator capacitor due to the overshoot past the true-zero base line. In the absence of an autozero phase, the residual charge would normally produce a significant error in the sample next taken. However, a digital algorithm eliminates the error and accounts for the residue as it propagates through all 10 samples.

Digital circuitry in U1 provides state machine control for the A/D converter, a read counter for A/D samples, decoding ROMs for analog switch drive and for read counter preset, and bi-directional bus control for storing control outputs from the microcomputer and for transferring data to the microcomputer. The digital circuitry within U1 is illustrated in Figure 2-3.

Basic timing for the A/D converter is defined as a series of 10 integrate/read cycles (samples), followed by a 100-ms autozero phase. However, the diode test and continuity function, the 32-MΩ range, the battery test, the power-up self test, overload recovery, autoranging, and the Touch-Hold mode all require variations from the basic timing. The state machine, in combination with the ROM and preset read counter, plus an autozero flag under computer control, establishes the timing variances necessary for the various functions.

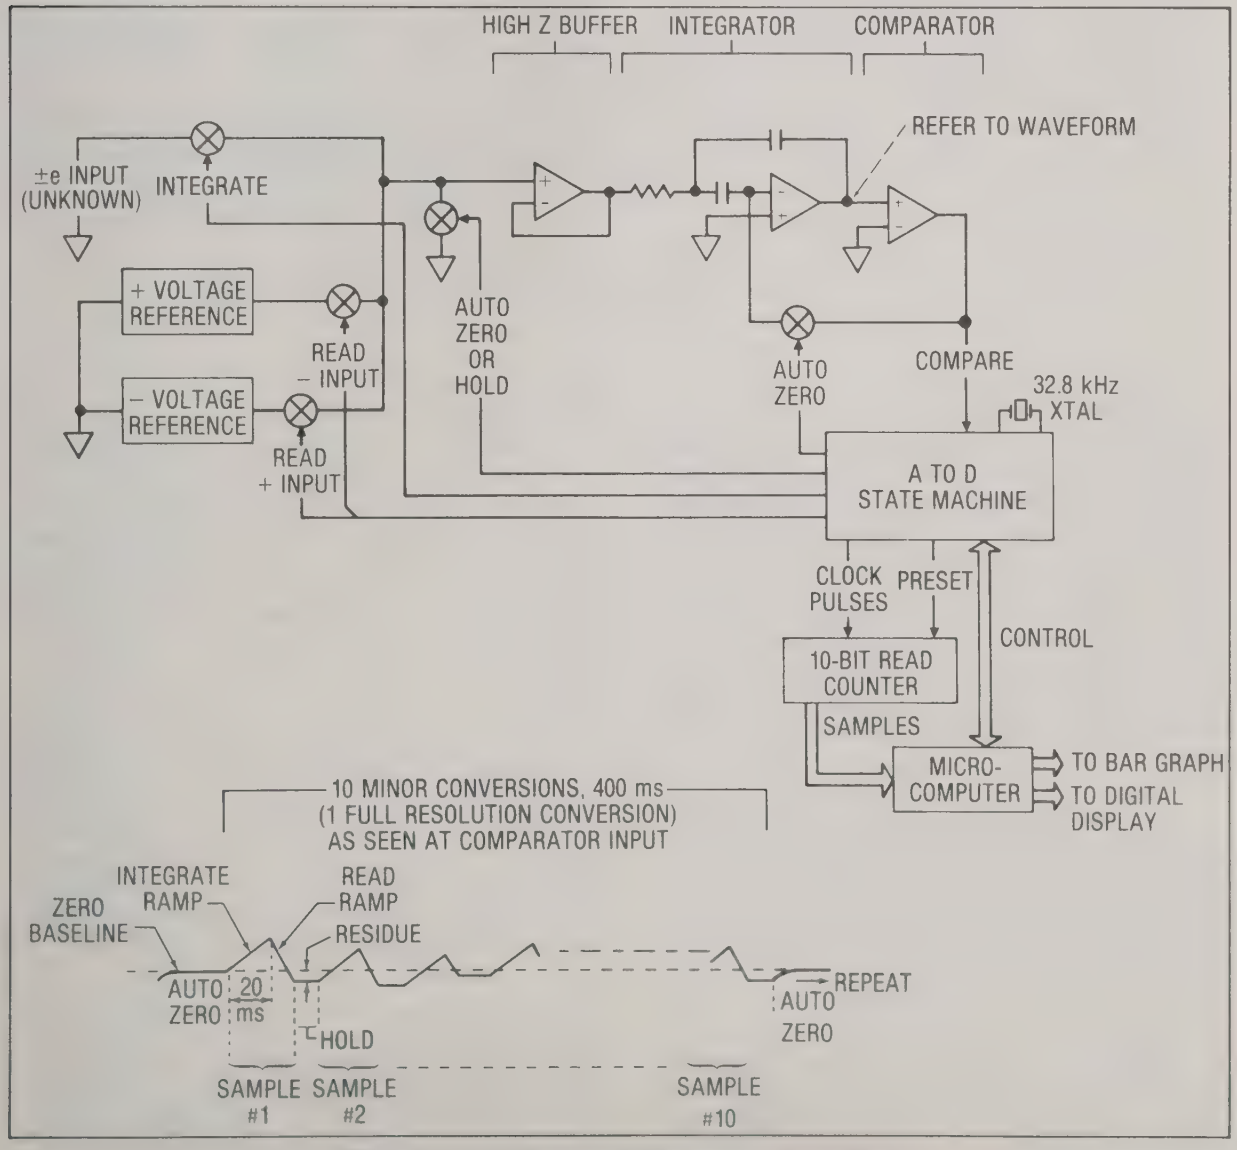


**Figure 2-2. A/D Conversion Elements and Waveform**

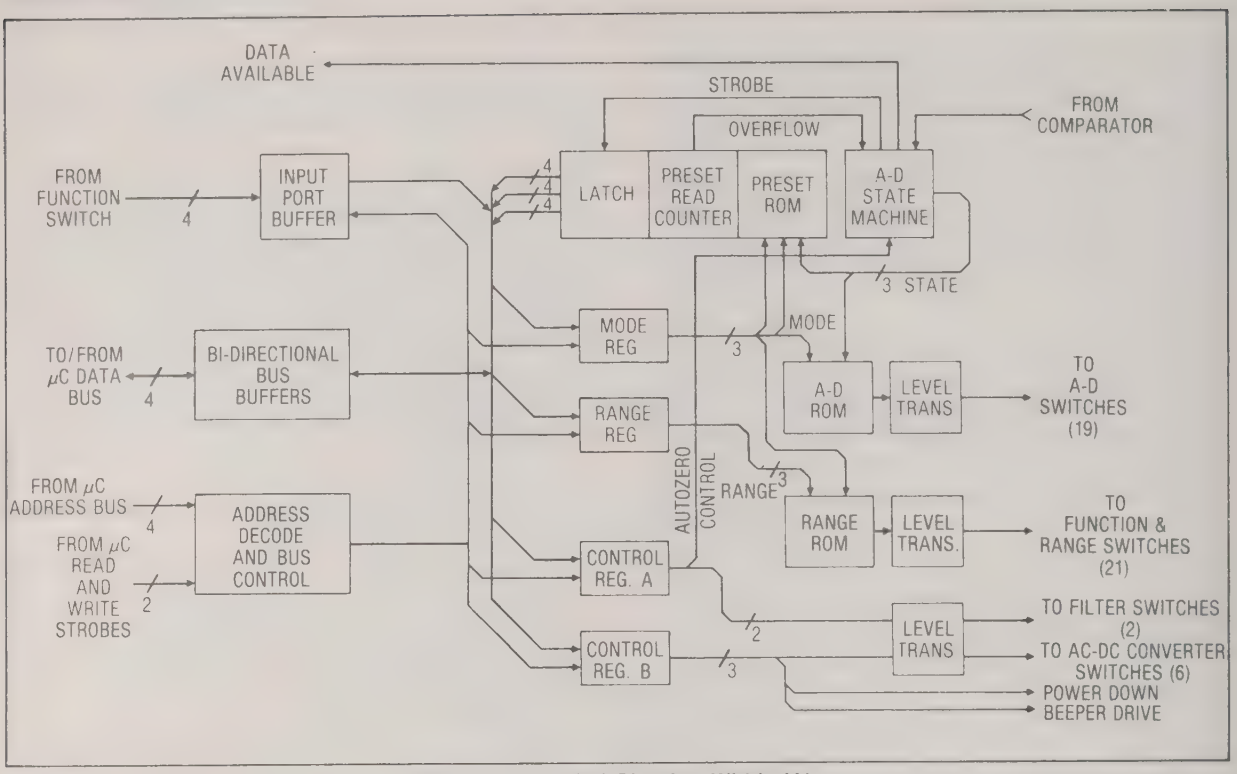


**Figure 2-3. Digital Circuitry Within U1**

## 2-8. Peripherals to U1

Circuitry peripheral to U1 provides regulated battery voltage to power U1, a regulated reference voltage for the A/D converter, a system clock, signal conditioning, and amplifier stabilization. The battery voltage regulator consists of AR1, Q12, and associated components; the regulator circuit supplies consistent operating power to U1 and, through a second regulator circuit in U1, to the microcomputer (U2). Voltage regulator VR1 (and associated components) supplies a regulated 1.000V reference voltage for the A/D converter. Potentiometer R19 provides for calibration adjustment of the reference voltage.

Additional circuits are necessary for the active filter, integrator, and buffer in U1. The active filter response is determined by R13, R16, C18, and C19. Integrator and buffer signal characteristics are determined by C20, C21, and two resistors in Z1. Several components external to U1 provide for ac-to-dc conversion; they are C41, C42, C43, R35, R7, C16, R30, R31, and R32.

The system clock, with a frequency of 32.786 kHz, controls all timing synchronization for the instrument. Y1 is a quartz crystal which determines the frequency of the clock oscillator circuit.

## 2-9. Microcomputer Control

A CMOS, 4-bit microcomputer (U2) controls the various instrument functions and drives the LCD display. The microcomputer reads and processes data samples from the A/D converter, sends a code to U1 which represents the operator-selected function, performs the Touch-Hold algorithm, selects the correct A/D mode for the function in use, controls range, sets the autozero flag, and disables the analog filter during autoranging.

In reading and processing A/D samples, the computer accepts raw sample data, applies necessary corrections as described in the preceding discussion of U1, and accumulates 10 samples which then become the full-resolution conversion for digital display. Each minor conversion is also processed for the bar-graph display. For the diode test and continuity function, the microcomputer evaluates the data and determines whether or not the beeper should be switched on.

Touch-Hold operation requires the microcomputer to perform a different algorithm. The microcomputer does not allow a full-resolution conversion to be completed unless the input signal is stable. When a stable reading occurs, the conversion is completed and the microcomputer generates the corresponding display and

freezes it. The microcomputer then waits for a change in the signal to exceed a certain threshold, and then begins watching for a stable reading again. There are two exceptions to this simple algorithm: First, open test lead indication does not allow a full-resolution conversion to be completed either; the microcomputer continues to wait for a stable signal which is outside the open test lead region. (Open test leads in voltage or current functions result in low readings; open test leads in resistance or diode test functions result in off-scale readings.) Second, if the Touch-Hold button is momentarily presse at any time, then the full-resolution conversion is forced to complete in spite of input or test lead conditions.

The microcomputer also sets the required A/D converter mode. A single mode is used in all voltage and current conversions, but there are three ohms function A/D converter modes, a diode test mode, and two power-up test modes (battery test and self test). The microcomputer sends the proper code to U1 to select the required A/D converter mode. Following each group of 10 samples, in normal operation, the microcomputer sets the autozero flag.

Both manual and autoranging are controlled by the microcomputer. The microcomputer loads a range register in U1 in conjunction with a mode-dependent map. In autorange, the analog filter is disabled to increase the autoranging speed.

Peripheral components Q13 and C12 force the microcomputer to reset when the function switch is moved to OFF. A voltage-divider network (R3, R4, and C13) supplies a mid-level voltage to drive the multiplexed display.

### 2-10. Display

The liquid-crystal display (LCD) operates under direct control of the microcomputer. Characters are generated by the computer and displayed on the LCD. Both digital readings and an analog bar-graph display are presented, in conjunction with annunciators and decimal points. Refer to the Fluke 25/27 Operator's Manual for a more detailed description of the display.

# static awareness

A Message From

**John Fluke Mfg. Co., Inc.**

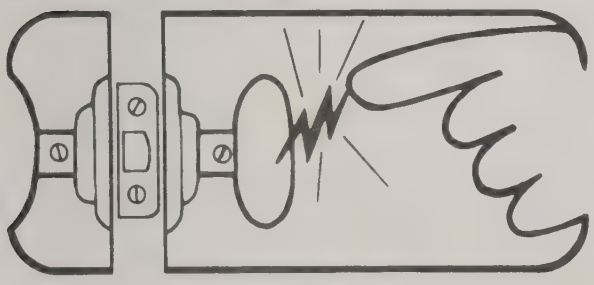

Some semiconductors and custom IC's can be damaged by electrostatic discharge during handling. This notice explains how you can minimize the chances of destroying such devices by:

1. Knowing that there is a problem.
2. Learning the guidelines for handling them.
3. Using the procedures, and packaging and bench techniques that are recommended.

The Static Sensitive (S.S.) devices are identified in the Fluke technical manual parts list with the symbol "⊗".

The following practices should be followed to minimize damage to S.S. devices.

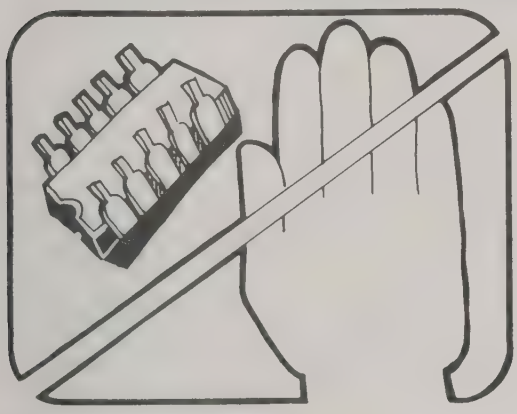

1. MINIMIZE HANDLING

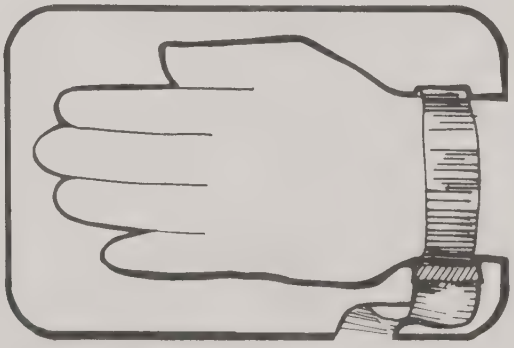

3. DISCHARGE PERSONAL STATIC BEFORE HANDLING DEVICES

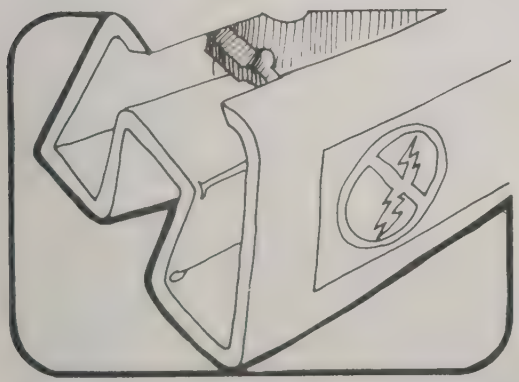

2. KEEP PARTS IN ORIGINAL CONTAINERS UNTIL READY FOR USE.

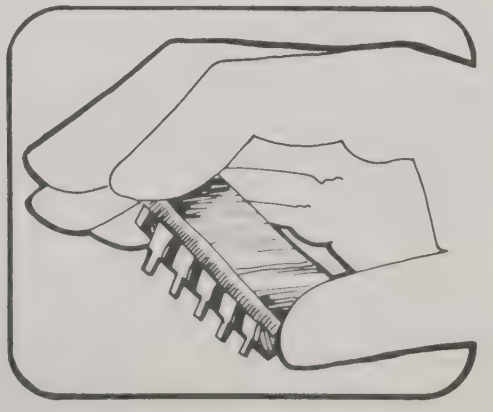

4. HANDLE S.S. DEVICES BY THE BODY

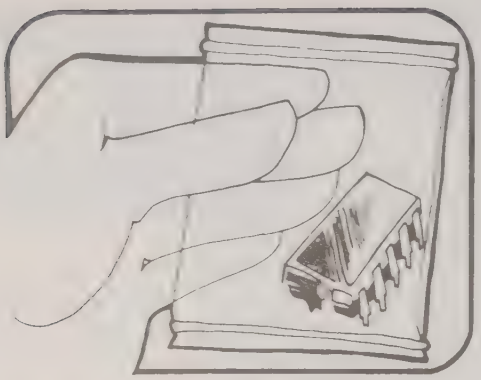

5. USE ANTI-STATIC CONTAINERS FOR HANDLING AND TRANSPORT

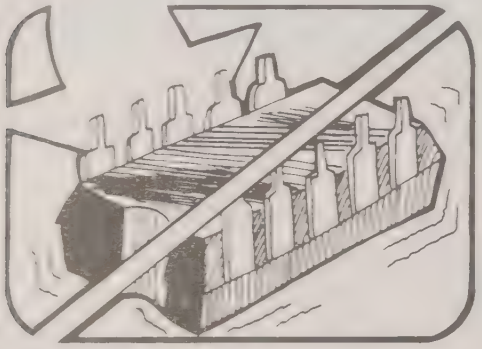

6. DO NOT SLIDE S.S. DEVICES OVER ANY SURFACE

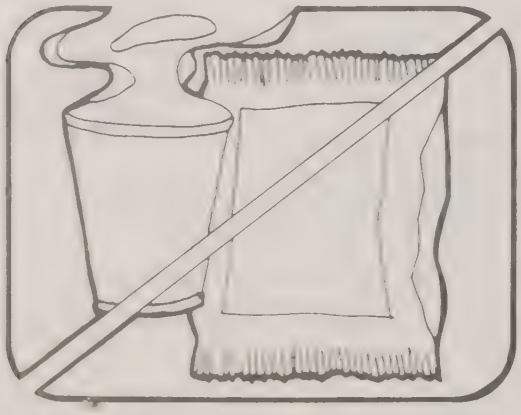

7. AVOID PLASTIC, VINYL AND STYROFOAM® IN WORK AREA

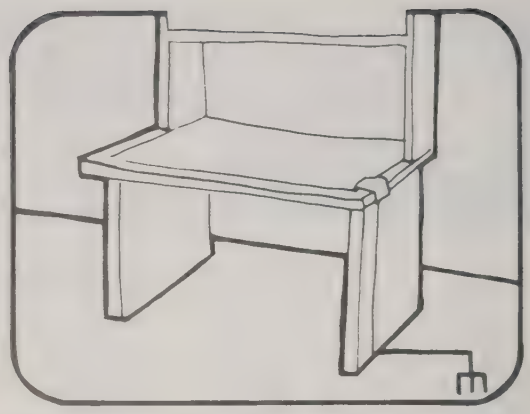

8. HANDLE S.S. DEVICES ONLY AT A STATIC-FREE WORK STATION

9. ONLY ANTI-STATIC TYPE SOLDER-SUCKERS SHOULD BE USED.

10. ONLY GROUNDED TIP SOLDERING IRONS SHOULD BE USED.

---

Anti-static bags, for storing S.S. devices or pcbs with these devices on them, can be ordered from the John Fluke Mfg. Co., Inc.. See section 5 in any Fluke technical manual for ordering instructions. Use the following part numbers when ordering these special bags.

| John Fluke Part No. | Bag Size |
|---|---|
| 453522 | 6" x 8" |
| 453530 | 8" x 12" |
| 453548 | 16" x 24" |
| 454025 | 12" x 15" |

PORTIONS REPRINTED
WITH PERMISSION FROM TEKTRONIX, INC
AND GENERAL DYNAMICS, POMONA DIV.

® Dow Chemical

# Section 3
# Maintenance

**WARNING**

**THESE SERVICE INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN OPERATOR MAINTENANCE UNLESS YOU ARE QUALIFIED TO DO SO.**

## 3-1. INTRODUCTION

This section presents instructions for disassembly, performance tests, calibration adjustment, and troubleshooting. The performance tests may be used as an acceptance test when the instrument is first received, and can be used later as a preventive maintenance tool.

A 1-year calibration cycle is recommended to maintain the instrument's specifications. In addition, the seals should be replaced during servicing to maintain the environmental specifications stated in that manual. A seal kit is available from the factory. The seal kit (Model 8025A-7401, part number 738112) contains a complete set of seals and four replacement screws and washers for the bottom case.

The test equipment required for the performance tests and calibration adjustments is listed in Table 3-1. Test equipment with equivalent specifications may be used if the recommended models are unavailable.

## 3-2. SERVICE INFORMATION

The Fluke 25 and 27 are warranted for a period of two years upon shipment of the instrument to the original purchaser. Conditions of the warranty are described on the registration card. Malfunctions that occur within the limits of the warranty will be corrected at no cost to the purchaser. For in-warranty service, ship the instrument post-paid to the Fluke Service Center nearest you. A list of service centers is included at the back of this manual.

Fluke Service Centers are also available for calibration or repair of instruments that are beyond the warranty period. Upon request, a cost estimate will be provided before work is performed on instruments that are beyond the warranty period.

If reshipment is necessary, please use the original shipping container. If the original container is not available, be sure that adequate protection is provided to prevent damage during shipment. It is recommended that the instrument be surrounded by at least 3 inches of shock-absorbing material in the shipping container.

## 3-3. OPERATOR MAINTENANCE

**WARNING**

**TO AVOID ELECTRICAL SHOCK, REMOVE THE TEST LEADS AND ANY INPUT SIGNALS BEFORE REPLACING THE BATTERY OR FUSES. CLOSE CASE AND REPLACE SCREWS BEFORE USING METER.**

### 3-4. Battery Replacement

The Fluke 25 and 27 are each powered by a single 9V battery (NEDA 1604, 6F22, or 006P). Referring to the Figure 3-1, use the following procedure to replace the battery:

1. Turn the rotary switch to OFF, and remove the test leads.

**Table 3-1. Recommended Test Equipment**

| INSTRUMENT TYPE | REQUIRED CHARACTERISTICS | RECOMMENDED MODEL |
|---|---|---|
| DMM CALIBRATOR | Voltage Range: 0-1000V ac, ±.05%<br>Frequency Range: 40-10,000 Hz, ±1%<br>Voltage Range: 0-1000V dc, Accuracy: ±.05%<br>Current Range: 2 mA-2A Accuracy: ±.2%<br>Values: 100 ohm, 1 kilohm, 10 kilohm, 100 kilohm, 1 megohm, 10 megohm Accuracy: ±.05% | John Fluke Models 5100B, 5101B, 5102B, 5215A |
| TRANSCONDUCTANCE AMPLIFIER | Output Range: 1-10A Accuracy: ±.1% | Fluke Model 5220A |

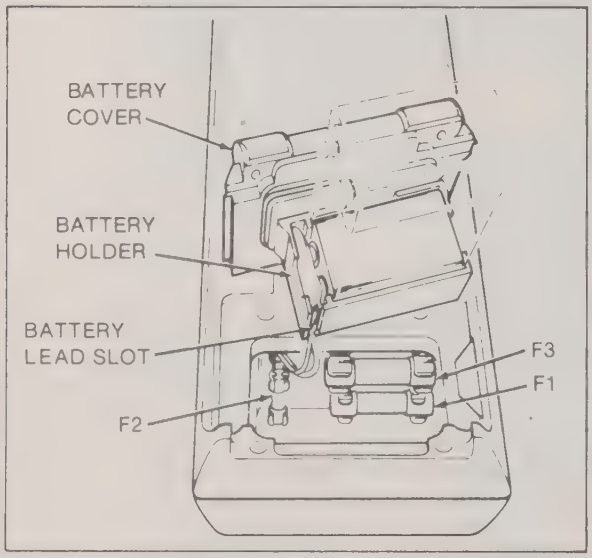


**Figure 3-1. Battery and Fuse Replacement**

2. Lift the instrument stand on the back of the instrument, then remove the four #6 X 32, Pozidriv screws from the battery cover.

3. Pull the battery cover straight out from the back of the instrument. (A coin-slot in the side of the battery cover facilitates removal.)

4. Remove the battery from the battery holder, then disconnect the battery connector.

5. Snap the battery connector to the terminals on the new battery, then slide the battery into the battery holder. Slip each battery lead into the slot in the holder.

6. Insert the battery holder/cover into the instrument, then start the four screws removed in step 2. Press firmly on the battery cover while tightening the screws in a diagonal pattern.

### 3-5. Fuse Test

1. Turn the function selector switch to the Ω position.

2. Connect a test lead from the volts/ohms/diode-test input terminal to the A input terminal.

3. The display should indicate between 0.1Ω and 0.3Ω. This tests F3 (20A, 600V fast).

4. Move one end of the test lead from the A input terminal to the mA/μA input terminal.

5. The display should indicate between 5.3Ω and 6.0Ω. This tests F1 (3A, 600V fast) and F2 (630 mA, 250V fast).

6. If either of the above display indications is OL (overload), replace the appropriate fuse.

### 3-6. Fuse Replacement

Referring to Figure 3-1, use the following procedure to check or replace the Fluke 25/27 fuses:

1. Perform steps 1 through 3 of the battery replacement procedure.

2. Remove the defective fuse (or check continuity through the suspected fuse), and if necessary install a new fuse of the same size and rating. (Remove the battery from the battery holder to gain access to the spare fuse for F2.)

3. Reinstall the battery holder/cover as instructed in step 6 of the battery replacement procedure.

## 3-7. GENERAL MAINTENANCE INFORMATION

## 3-8. Handling Precautions For Static-Sensitive Devices

**CAUTION**

**This unit contains CMOS components which can be damaged by static discharge. Static-sensitive components include U1 (the custom analog IC), U2 (the microcomputer), and op amp AR1. To prevent static discharge damage, take the following precautions when servicing the instrument.**

- Perform all work at a static-free work station.
- Do not handle components or pcb (printed circuit board) assemblies by their connectors.
- Wear static ground straps.
- Use conductive foam to store components.
- Remove all plastic, vinyl, and styrofoam from the work area.
- Use a grounded, temperature-regulated soldering iron.

## 3-9. Disassembly

**WARNING**

**TO AVOID THE POSSIBILITY OF ELECTRIC SHOCK, REMOVE THE TEST LEADS PRIOR TO DISASSEMBLY.**

**CAUTION**

**Opening the instrument case in damp, humid environments followed by moving the instrument to a cooler environment could cause condensation inside the case. Instrument performance may be adversely affected by condensation.**

**CAUTION**

**To avoid contaminating the pcbs with oil from the hands (or O-ring lubricant), handle the pcbs by the edges or wear gloves. If a pcb does become contaminated, refer to the cleaning instructions given later in this section. Do not allow the LCD to come in contact with moisture.**

*NOTE*

*Disassembly requires a number 2 Posidriv® screwdriver for all exterior screws and a number 1 Phillips-head screwdriver for all interior screws. Reassembly requires silicone lubricant (Parker Super O-lube is recommended) and new seals. A Fluke seal kit (Model 8025A-7401, Fluke Part Number 738112) provides a complete set of seals and four replacement screws and washers for the bottom case.*

Most maintenance procedures require at least partial instrument disassembly. The following procedure (illustrated in Figure 3-2) provides complete step-by-step disassembly instructions to gain access to any assembly. Complete disassembly is not required to gain access to most assemblies; the following procedure contains notes that explain which maintenance procedures are possible at various levels of disassembly.

1. Turn the function switch to the upper OFF position.

2. Lift the tilt bail up about 1 inch up from the back of the instrument, then gently pull out the ends of the tilt bail and remove it.

3. Remove the four Posidriv® machine screws (H6) that hold the battery cover (MP14) to the bottom case, then lift the battery cover and battery holder out of the instrument.

4. Remove the battery and battery connector from the battery holder, then disconnect the battery.

5. Remove the battery holder from the battery cover by tilting the battery holder toward the non-skid foot and sliding it off the battery cover (away from the non-skid foot). Remove the old O-ring (MP15). Clean the O-ring surfaces of the battery cover and the instrument case. Install the battery holder on the battery cover, then install the new O-ring.

6. Remove the four Posidriv® screws (H7) with rubber washers from the bottom case.

7. Lift the bottom case off the instrument, and remove the O-ring (MP13) between the top and bottom cases. (Always install a new O-ring prior to reassembly.)

8. At this point, all calibration adjustments are accessible through the openings in the side of the pcb shield. Refer to the calibration adjustment procedure later in this section to calibrate the instrument.

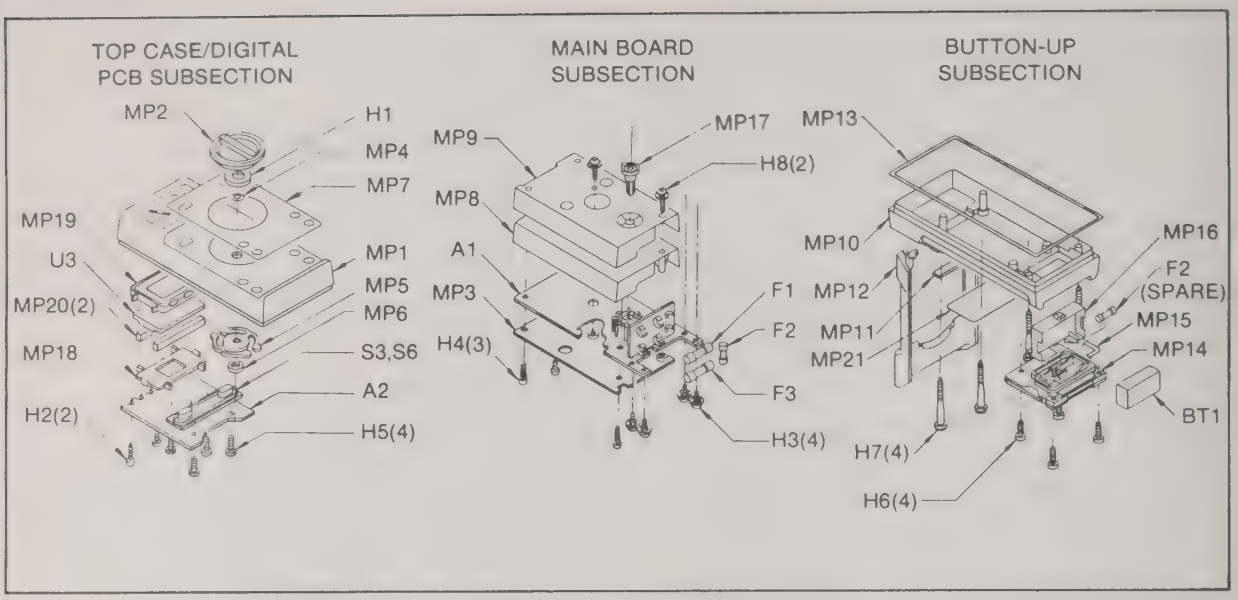


**Figure 3-2. Disassembly**

9. Remove the four Phillips-head screws (H3) at the bottom of the pcb that connect the pcb to the input terminals molded into the top case.

10. Carefully lift the upper end of the main pcb and shield assembly to disconnect the assembly from the digital pcb, then lift the main pcb and shield assembly clear of the case.

11. Note the position of the rotary switch extension shaft (MP17). With the rotary switch in the OFF position, the single small pointer on the base of the extension shaft is pointed toward the top of the instrument. Refer to Figure 3-3.

12. Lift the rotary switch extension shaft (MP17) off the rotary switch shaft (the shaft on MP2).

13. Remove the E-ring retainer (MP6) and the detent spring (MP5) from the rotary switch shaft.

14. Pull the rotary switch knob (MP2) out from the front of the top case (MP1). Take care not to loose the Teflon bearing washer (H1) under the knob.

15. To replace the O-ring (MP4) on the rotary switch shaft, cut off the existing O-ring without scratching the metal shaft. Clean the shaft thoroughly, and slide a new O-ring over the shaft into the groove on the shaft.

16. Remove the four lower Phillips-head screws (H5) that secure the digital pcb to the top case using a diagonal pattern (i.e., remove the upper-right screw, then the lower-left, then the upper-left, and last the lower-right). Then remove the two Phillips-head screws (H2) at the top of the digital pcb, above the connector.

17. Carefully lift the digital pcb straight up from the top case and remove it.

**CAUTION**

**Do not touch the elastomeric LCD contact strips (MP20) or contacts of the momentary switch (S3-S6) with bare hands. Wear gloves or remove the contact strips using clean pliers or tweezers. Avoid contaminating the contact strips.**

18. Lift the momentary switch (S3-S6) from the top case.

19. Remove the elastomeric LCD contact strips (MP20) and the LCD interconnect support (MP18), located on the back of the LCD.

20. Remove the LCD (U3) and the LCD mask (MP19) from the case.

21. To disassemble the main pcb shield assembly, first remove the two Phillips-head screws (H8) from the top shield (MP9). Take care not to lose the flat washers under the screw heads.

22. Turn the assembly over and remove the three thread-forming, Phillips-head screws (H4) that secure the bottom shield (MP3).

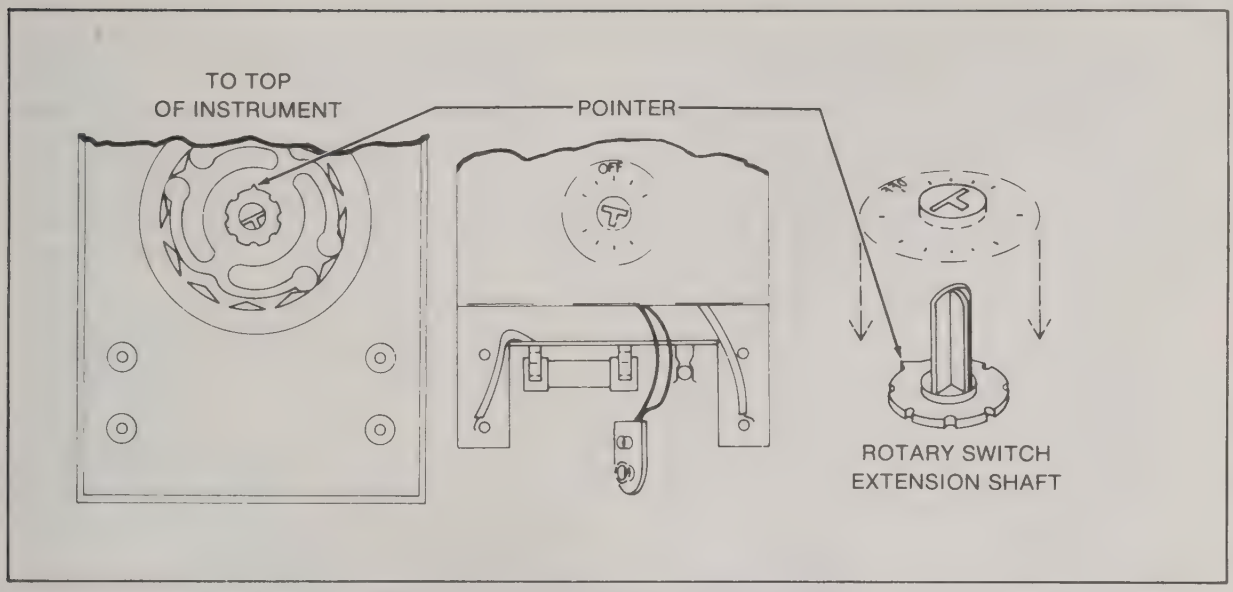


**Figure 3-3. Switch Extension Shaft Installation**

23. Lay the bottom shield aside, and separate the top shield from the pcb.

24. At this point, all main pcb components are accessible.

## 3-10. Reassembly

*NOTE*

*Reassembly requires a number 2 Posidriv® screwdriver for all external screws, a number 1 Phillips-head screwdriver for all internal screws, silicone lubricant (Parker Super O-lube is recommended), and new seals. A Fluke seal kit (Model 8025A-7401, Fluke Part Number 738112) provides a complete set of seals and four replacement screws and washers for the bottom case.*

Reassembling the instrument is primarily a reversal of the disassembly procedure. However, some precautions are necessary to ensure proper sealing and to maintain water-tight integrity. Use the following procedure to reassemble the instrument:

**CAUTION**

**Do not touch the elastomeric LCD contact strips (MP20) or contacts of the momentary switch (S3-S6) with bare hands. Wear gloves or remove the contact strips using clean pliers, or tweezers. Avoid contaminating the contact strips.**

1. Position the LCD mask (MP19) in the top case (MP1), then place the LCD (U3) in the LCD mask with the Fluke part number toward the top of the instrument, pressing the LCD lightly to engage the spring action of the LCD mask. Place the LCD interconnect support (MP18) over the LCD, then place the elastomeric connector strips (MP20) at the top and bottom of the LCD interconnect support with the black connection strip against the LCD.

2. Note the small bump at the center of one edge of the momentary switch (S3-S6). Place the momentary switch in the case with the bump toward the LCD display.

3. Place the digital pcb in the top case with the connector toward the back of the instrument and at the top of the case.

4. Install the four lower Phillips-head screws (H5) that secure the digital pcb over the momentary switch. Note that the momentary switch provides a seal between the case and the digital pcb. Install the screws using a diagonal sequence (i.e., upper-right, then lower-left, then upper-left, then lower-right).

5. Install the two thread-forming, Phillips-head screws (H2) above the connector that hold the top of the digital pcb.

6. Install a new O-ring (MP4) on the rotary switch shaft (if not previously installed), then place the Teflon washer (H1) on the rotary switch shaft, then install the rotary switch knob in the front of the top case.

7. Lubricate the outer edges of the detent spring (MP5) with a very thin layer of silicon lubricant, then install the detent spring over the rotary switch shaft. Detent spring orientation is not critical.

8. Install the E-ring retainer (MP6) on the rotary switch shaft.

9. Rotate the rotary switch to the upper OFF position.

10. Place the rotary switch extension shaft (MP17) on the rotary switch shaft. Note the small pointer on the base of the extension shaft. Place the pointer toward the center of the display while the rotary switch knob is in the upper OFF position.

11. To reassemble the main pcb/shield assembly, fit the top shield (MP9) over the component side of the pcb, taking care not to bend the connector pins. Make sure the shield posts fit through the holes in the pcb, and verify that the rotary switch is in the upper OFF position.

12. Position the bottom shield (MP3) on the back of the pcb with the stand-offs fitted through the pcb, then position the top shield on the top of the pcb with the molded stand-offs fitted through the pcb.

13. Install the two Phillips-head machine screws (H8) and flat washers through the top shield into the bottom shield. Install the three thread-forming Phillips-head screws (H4) through the bottom shield into the top shield.

14. Carefully fit the main pcb/shield assembly into the top case, taking care to ensure that the connector pins on the main pcb are lined up properly with the connector on the digital pcb, and that the switch shaft extension aligns with the two rotary switch wafers in the OFF position (do not use force). Engage the connector by pressing lightly on the bottom shield at the case screw holes.

15. Install the four Phillips-head machine screws (H3) with lock washers that secure the main pcb/shield assembly to the back of the input terminals, again using a diagonal pattern.

16. Install a new O-ring (MP13) on the bottom case (MP10), if it was not replaced during disassembly, and position it at the beginning of the tapered area.

17. Place the bottom case on the top case, then start four new thread-forming screws (H7) with rubber washers. (The new screws and washers are provided in the seal kit.) Press the case halves firmly together, and using a number 2 Posidriv® screwdriver, tighten the screws in a diagonal pattern (lower-right, upper-left, upper-right, lower left,) to ensure a proper seal.

18. If the battery compartment O-ring (MP15) was not replaced during disassembly, it should be replaced before reassembly. Use the procedure given in step 5 of the disassembly procedure.

19. Connect the battery to the battery terminal connector, then slide the battery into the battery holder (MP16). Place the wires in the slot in the upper edge of the battery holder.

20. Slide the battery holder/cover assembly into the back of the instrument.

21. Start the four screws (H6) that secure the battery cover. Press firmly on the battery cover while tightening the screws in a diagonal pattern using a number 2 Posidriv® screwdriver.

22. Move the rotary switch knob from OFF to any function. All segments of the LCD should illuminate briefly if the instrument has been properly assembled.

## 3-11. Cleaning

**CAUTION**

**Do not use aromatic hydrocarbons or chlorinated solvents for cleaning. These solutions will react with the plastic materials used in the instrument.**

**CAUTION**

**Do not allow the LCD to come in contact with moisture.**

Clean the exterior plastic parts using a mild solution of detergent and water on a soft cloth. Clean dust from the pcbs using clean, dry air at low pressure (less than 20 psi). Clean contaminates from the pcbs using isopropyl alcohol and a soft brush, followed by demineralized water and a soft brush (remove the LCD before washing). Dry the pcb at 50 to 60 degrees Celsius for 24 hours after washing (and before reassembly) to assure that no moisture is sealed in the instrument.

## 3-12. PERFORMANCE TEST

The following procedures allow you to check the performance of the Fluke 25 or 27 against the specifications given in the Fluke 25/27 Operator's Manual. The procedures are recommended for incoming

inspection, periodic calibration verification, and as an aid in troubleshooting. If the instrument fails any test, calibration adjustment or repair is needed.

Prior to performing any of the testing procedures, allow the instrument to stabilize to room temperature (18 to 28 degrees Celsius). Also, check the fuses and if the battery annunciator is displayed, change the battery.

*NOTE*

*In the following procedures, the Fluke 25 and 27 are referred to as the unit under test, or UUT.*

### 3-13. Display Test

When the function switch is moved from the OFF position to any other position, the instrument performs a power-up self test. All LCD segments in the display are switched on while the test is in progress, then the instrument commences normal operation. This automatic self test verifies that the instrument is functional and that all LCD segments are functioning.

### 3-14. Voltage Functions Performance Verification

The following procedure may be used to verify proper operation and calibration of the ac and dc voltage measurement functions. Required test equipment is listed in Table 3-1.

**CAUTION**

**Connect the common terminal of the Digital Multimeter Calibrator to the COM terminal on the UUT.**

1. Verify that both the Digital Multimeter Calibrator (hereafter referred to as the DMM Calibrator) and the UUT are off.
2. Connect the UUT, using the volts/ohms/diode-test input terminal, to the ac output connections of the DMM Calibrator.
3. Turn the function switch on the UUT to the ac voltage position ($\tilde{V}$).
4. Switch on power to the DMM Calibrator, and program it for an output of 2.7V ac, at 100 Hz.
5. Verify that the UUT indicates between 2.684 and 2.716V ac.
6. Program the DMM Calibrator for an output of 27V ac, at 10 kHz.
7. Verify that the UUT indicates between 26.43 and 27.57V ac.
8. Program the DMM Calibrator output for 250V ac, 10 kHz.
9. Verify that the UUT indicates between 244.7 and 255.3V ac.
10. Program the DMM Calibrator for an output of 1000V ac, at 10 kHz.
11. Verify that the UUT indicates between 967 and 1033V ac.
12. Program the DMM Calibrator for an output of zero volts.
13. Turn the UUT function switch to the dc voltage position ($\overline{\overline{V}}$).
14. Program the DMM Calibrator output for 2.7V dc.
15. Verify that the UUT indicates between 2.696 and 2.704V dc.
16. Program the DMM Calibrator for an output of 27V dc.
17. Verify that the UUT indicates between 26.96 and 27.04V dc.
18. Program the DMM Calibrator output to 250V dc.
19. Verify that the UUT indicates between 249.6 and 250.4V dc.
20. Program the DMM Calibrator for an output of 1000V dc.
21. Verify that the UUT indicates between 998 and 1002V dc.
22. Switch off the DMM Calibrator. Disconnect the Calibrator from the UUT.

### 3-15. AC and DC Current Performance Verification

The following procedure may be used to test the ac and dc current functions, and to verify current measurement accuracy.

1. Turn the UUT function switch to the ac mA A position ($m\tilde{A}/\tilde{A}$).
2. Connect the DMM Calibrator output to the UUT mA/μA input terminal.

3. Switch on power to the DMM Calibrator and program the DMM Calibrator output for 27 mA at 50 Hz.

4. Verify that the UUT indicates between 26.58 and 27.42 mA.

5. Program the DMM Calibrator output for 270 mA at 50 Hz.

6. Verify that the UUT indicates between 265.8 and 274.2 mA.

7. Program the DMM Calibrator output for zero amps.

8. Switch the UUT to the ac $\widetilde{\mu A}$ function ($\widetilde{\mu A}$), then program the DMM Calibrator output for 2700 $\widetilde{\mu A}$ at 500 Hz.

9. Verify that the UUT indicates between 2658 and 2742 $\mu$A.

10. Program the DMM Calibrator output for zero amps.

11. Disconnect the DMM Calibrator from the UUT, connect the DMM Calibrator to the Transconductance Amplifier, then connect the Transconductance Amplifier to the UUT amp (A) and common (COM) input terminals.

12. Program the DMM Calibrator output for an output from the Transconductance Amplifier of 5A at 1 kHz.

13. Verify that the UUT indicates between 4.91 and 5.09A. Program the DMM Calibrator to standby.

14. Set the UUT to the dc $\overline{mA/A}$ function ($\overline{mA/A}$).

15. Program the DMM Calibrator output for an output from the Transconductance Amplifier of 5.0A dc.

16. Verify that the UUT indicates between 4.94 and 5.06A.

17. Program the DMM Calibrator to standby.

18. Disconnect the DMM Calibrator from the Transconductance Amplifier.

19. Turn the function switch on the UUT to the dc $\overline{mA/A}$ position ($\overline{mA/A}$).

20. Connect the DMM Calibrator output to the UUT mA/$\mu$A input terminal, then program the DMM Calibrator for an output of 27 mA dc.

21. Verify that the UUT indicates between 26.78 and 27.22 mA.

22. Program the DMM Calibrator output for 2700 $\overline{\mu A}$ dc. Set the UUT to the dc $\overline{\mu A}$ function ($\overline{\mu A}$).

23. Program the DMM Calibrator for 2.7 mA.

24. Verify that the UUT indicates between 2678 and 2722 $\mu$A.

### 3-16. Ohms Function Performance Verification

The following test may be used to verify correct ohms function operation and to verify UUT accuracy in the various ohms ranges.

1. Connect the DMM Calibrator to the UUT using the volts/ohms/diode-test input terminal and common.

2. Turn the function switch to the $\Omega$ position.

3. Switch on power to the DMM Calibrator. Program the DMM Calibrator to the resistance values indicated in Table 3-2, and verify that the UUT indication is within the tolerances given for each input value.

**Table 3-2. Ohm Function Performance Test**

| STEP | INPUT RESISTANCE | DISPLAY INDICATION |
|---|---|---|
| 1 | 100 ohms | 99.5 to 100.5 |
| 2 | 1000 ohms | .997 to 1.003k |
| 3 | 10,000 ohms | 9.97 to 10.03k |
| 4 | 100,000 ohms | 99.7 to 100.3k |
| 5 | 1 megohm | .997 to 1.003M |
| 6 | 10 megohm | 9.89 to 10.11M |
| *7 | open circuit | 00.00 to 00.10 nS |

*NOTE: Conductance (nS) range must be entered using manual range selection.

### 3-17. Diode Test Performance Verification

The following procedure may be used to verify proper operation of the diode test function. (This test can not be performed unless the source can sink 0.6 mA at 0.9V.)

1. Turn the UUT function selection switch to the diode test function.

2. The UUT should display OL.

3. Connect the DMM Calibrator to the UUT volt/ohms/diode-test input terminal and common, and switch on Calibrator power.

4. Program the DMM Calibrator output for 0.090V, then push the 50Ω divider override button on the Calibrator to place the Calibrator in the 2V range.

5. Verify that the UUT indicates approximately 0.090V and the beeper is sounding a continuous tone.

6. Increase the DMM Calibrator output to 0.11V. The beeper should turn off.

7. Increase the Calibrator output to 1.0V, then slowly decrease the Calibrator output to 0.6V. Note that the UUT beeper produces a short beep as the voltage descends through 0.7V (typical silicon diode threshold).

## 3-18. CALIBRATION ADJUSTMENT

Under normal operating conditions, the Fluke 25 and 27 should maintain its specifications for a period of one year after calibration. If the instrument has been repaired, or if it has failed any of the performance tests, the following calibration adjustment procedures must be performed. Use a non-conductive tool for adjustments.

*NOTE*

*In the following procedures, the Fluke 25 and 27 are referred to as the unit under test, or UUT.*

### 3-19. Calibration Preparation

Allow the UUT to stabilize at an ambient temperature of 21 to 25 degrees Celsius (70 to 77 degrees Fahrenheit) and at a relative humidity of less than 80% with the power off for at least 30 minutes before beginning calibration. Calibration adjustments require removal of the bottom cover. Complete steps 1 through 7 of the disassembly procedure given earlier in this section, and then reconnect the battery to the UUT's battery connector.

### 3-20. DC Voltage Calibration

The dc voltage function must be calibrated before calibrating the other functions. Use the following procedure to calibrate the dc voltage function.

1. Connect the DMM Calibrator to the UUT volts/ohms/diode-test input terminal and common. Refer to Figure 3-4 for calibration component locations.

2. Select the dc voltage function $\overline{\overline{\text{V}}}$ on the UUT.

3. Switch on power to the DMM Calibrator, and program the Calibrator output for 2.700V dc.

4. Adjust potentiometer R19 on the UUT for a display indication of 2.700V on the 3V range.

5. Program the DMM Calibrator for zero output, and disconnect the Calibrator from the UUT.

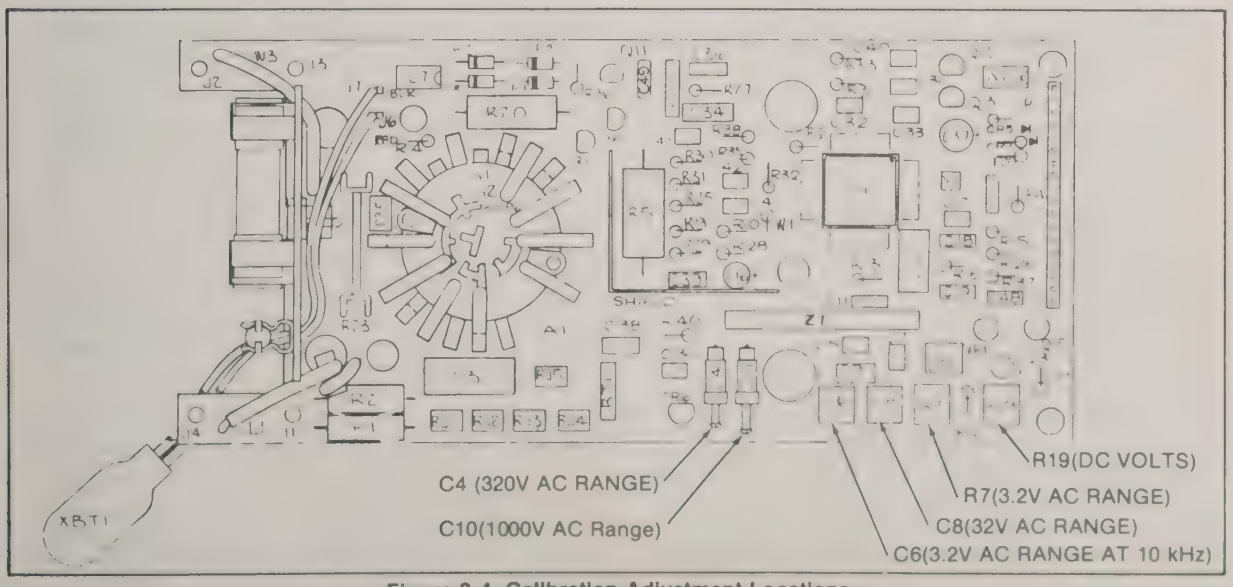


**Figure 3-4. Calibration Adjustment Locations**

### 3-21. AC Voltage Calibration

There is a single ac-to-dc converter adjustment for basic ac voltage accuracy. However, each ac voltage range must be calibrated independently for high frequency accuracy. Variable capacitors provide these high frequency adjustments. There should be no interaction between the various ranges when adjustments are made in the specified order. Use the following procedure to calibrate the ac voltage ranges.

**WARNING**

**THE FOLLOWING PROCEDURE REQUIRES THAT HIGH VOLTAGES BE SUPPLIED TO THE UUT FOR CALIBRATION. READ THE SAFETY PRECAUTIONS IN THE FLUKE 25/27 OPERATOR'S MANUAL BEFORE PERFORMING THE FOLLOWING PROCEDURE.**

1. Select the ac voltage function $\overline{(V)}$ on the UUT.
2. Connect the DMM Calibrator to the volts/ohms/diode-test input terminal on the UUT.
3. Program the DMM Calibrator output for 2.7V ac at 100 Hz.
4. Adjust R7 to obtain a display of 2.700V ac ±0.001V ac.
5. Program the DMM Calibrator output for 270V ac at 10 kHz.
6. Adjust C4 to obtain a display of 270.0V ac ±0.1V ac.
7. Program the DMM Calibrator output for 1000V ac at 10 kHz.
8. Adjust C10 to obtain a display of 1000V ac ±1V ac.
9. Program the DMM Calibrator output for 27.00V ac at 10 kHz.
10. Adjust C8 to obtain a display of 27.00V ac ±0.01V ac.
11. Program the DMM Calibrator output for 2.700V ac at 10 kHz.
12. Adjust C6 to obtain a display of 2.700V ac ±0.001V ac.
13. Program the DMM Calibrator output for 2.700V ac at 100 Hz.
14. Verify that the UUT display indicates 2.700V ac ±0.017V ac.
15. Switch off both the DMM Calibrator and the UUT. Disconnect the DMM Calibrator from the UUT.
16. Refer to the instructions in paragraph 3-10 to reassemble the UUT after calibration.

### 3-22. TROUBLESHOOTING

**CAUTION**

**Static discharge can damage CMOS components U1 and U2. Follow the handling precautions for static sensitive components given previously. Never remove or install components without first disconnecting all inputs to the instrument and turning the function selector switch to OFF.**

Refer to Figure 3-3 and to the schematics in Section 5 of this manual as necessary during the following troubleshooting procedures.

### 3-23. Power-Up Self Test

When the function switch is moved to any position from the OFF position, the instrument performs a power-on self test. All LCD segments are switched on while the test is being performed (about 1 second), then the unit commences normal operation.

### 3-24. Overall System Check

If the LCD display segments do not light, or if other malfunction indications occur during power-up or operation, perform the following overall system check. All measurements are taken with respect to common. The overall system check is helpful in isolating a malfunction to the component area, and Table 3-3 provides further fault isolation within the component area. Refer to the disassembly and reassembly procedures as necessary (paragraphs 3-9 and 3-10).

1. Set up the instrument as follows:
   a. Perform steps 1 through 10 of the disassembly procedure to remove the battery cover, bottom case, and main pcb/shield assembly from the instrument. (Skip step 5.)
   b. Perform steps 21 through 23 of the disassembly procedure to remove the top and bottom shields from the main pcb.
   c. Perform step 14 of the reassembly procedure to install the main pcb in the top case.

d. Perform step 15 of the reassembly procedure to secure the main pcb to the input terminals.

2. Select the dc voltage function $\overline{\overline{\overline{V}}}$.

3. Use a Digital Voltmeter (DVM) to check the battery voltage at the battery connector (battery voltage must be above 6.3V). If battery voltage is less than 7.5V, battery replacement is advised. Normal current drain is less than 600 $\mu$A.

4. Connect either an oscilloscope or frequency counter, using a low-capacitance probe, to pin 54 of U1 or to the junction of C17 and Y1 (the crystal). A 32.768-kHz sine wave with an amplitude of approximately 600 mV peak-to-peak should be present at the junction of C17 and Y1 (3V peak-to-peak at U1, pin 54). Note that U2 and the display will not operate if the clock signal is not present. If the clock signal is not present, the most likely causes are U1, Y1, or C17.

5. Use a DVM to check for a reference voltage of 1.00V dc (adjustable through R19) at pin 13 of U1 or at the junction of R15 and R18. If the reference voltage is not present, the most likely causes are VR1, R12, R15, R18, R19, R37, or U1.

6. Use a DVM to check for Vm (voltage middle) at pin 55 of U2, pin 16 of J8, or at the junction of R3 and R4. Vm should be 1.6V dc $\pm$0.1V. If Vm is not present, the most likely causes are R3, R4, or C13.

### 3-25. DC Voltage Signal Tracing

The following procedure is a step-by-step method of tracing a dc voltage input through the instrument's circuits to the output of the active filter. Faulty components in the input signal path can be identified using this procedure. All measurements are taken with respect to common.

1. Select the dc voltage function $\overline{\overline{\overline{V}}}$, then apply a 2V dc input through the volts/ohms/diode-test input terminal.

2. Using a DVM, measure the 2V input at the input terminal (J1).

3. Check pin 1 of the input divider (Z1) for 2V dc. If 2V dc is not present, R2, S1, RJ1, RJ2, RJ3, RJ4, or RJ5 may be defective.

**Table 3-3. Fault Diagnosis Guide**

| SYMPTOM | RECOMMENDED ACTION | POSSIBLE COMPONENT |
|---|---|---|
| Blank display | Do system check given in paragraph 3-24. | BT1, U1, U2, Y1, C13 |
| Display reads zero in volt dc | Do dc signal tracing in paragraph 3-25. | R2, Z1, U1, S1 |
| Display hangs up in self-test mode | Do system check given in paragraph 3-24. | R15, R18, R19, R12, R37, VR1, Z1, U1, C20, C21 |
| Display reads OL or 0 in 320 mA range | | R9, R10, U1 |
| Display reads 0 in 320 mA or 10A ranges | | F1, F2, F3, R9, R20, R14 |
| AC volts is inaccurate | Check calibration | R31, R32, R29, R30 |
| 320 mV range reads OL | | Q11, U1 |
| AC volts measurement noisy at 50-60 Hz | | R13, R16, C18, C19 |
| Wrong annunciator displayed | | S1R, U1 |
| Volts inaccurate | Check calibration | RJ2-RJ5 |
| Ohms inaccurate | | Z1, U1 |
| Intermittent display | Clean connectors and connector strips on LCD and pcb | Display Assembly |
| Display reads constant offset in volts | | C18, C19, C20 shorted |
| Ohms reads low or will not read OL | | Q1, Q2 shorted or leaky |
| Ohms reads random or alternates between on scale and OL | | R2, RT2 |

4. Check pin 3 of Z1 for approximately 200 mV dc. If 200 mV is not present, either Z1 or U1 may be defective. (Measurement may be approximately 10% low if a 10-MΩ input impedance DVM is being used for signal tracing.)

5. Check the active filter input (pin 28 of U1) for approximately 200 mV dc. If 200 mV is not present, U1 may be defective. (Measurement may be affected by loading.)

6. Check the active filter output (pin 29 of U1) for approximately 200 mV dc. If 200 mV is not present, R13, R16, C18, or C19 may be defective. (Measurement may be affected by loading.)

### 3-26. Fault Diagnosis Guide

Table 3-3 presents a fault diagnosis guide for the Fluke 25 and 27. The left column lists various malfunction symptoms. The center column recommends actions to determine the exact problem. The right column lists the components most likely to be defective.

# Section 4
# List of Replaceable Parts

TABLE OF CONTENTS


| ASSEMBLY NAME | TABLE NO. | PAGE NO. | FIGURE NO. | PAGE NO. |
|---|---|---|---|---|
| 25/27 Final Assembly | 4-1 | 4-3 | 4-1 | 4-4 |
| A1 Main PCB Assembly | 4-2 | 4-5 | 4-2 | 4-7 |
| A2 Digital PCB Assembly | 4-3 | 4-8 | 4-3 | 4-8 |

## 4-1. INTRODUCTION

This section contains parts breakdown of the instrument. Parts are listed alphanumerically by assembly.

The part lists include the following information:

1. Reference Designation.
2. Description of each part.
3. Fluke Stock Number.
4. Federal Supply Code for Manufacturers. (See rear of manual for a code-to-name list.)
5. Manufacturer's part number.
6. Total Quantity of components per assembly.
7. Recommended Quantity: This entry indicates the recommended number of spare parts necessary to support one to five instruments for a period of 2 years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for 1 year or more at an isolated site, it is recommended that at least one of each assembly in the instrument be stocked.

## 4-2. HOW TO OBTAIN PARTS

Components may be ordered directly from the manufacturer by using the manufacturer's part number, or from John Fluke Mfg. Co., or its authorized representative by using the Fluke part number.

In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

To ensure prompt and efficient handling of your order, include the following information.

1. Quantity.
2. Fluke Stock Number.
3. Description.
4. Reference Designation.
5. Printed Circuit Board Part Number and Revision Letter.
6. Instrument Model and Serial Number.

A Recommended Spare Parts Kit for your basic instrument is available from the factory. This kit contains those items listed in the REC QTY column of the parts list in the quantities recommended.

Parts price information is available from the John Fluke Mfg. Co., Inc. or its representative. Prices are also available in the Fluke Replacement Parts Catalog, which is available on request.

**CAUTION**

**Parts preceded by the above symbol are subject to damage by static discharge.**

Table 4-1. 25/27 Final Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| | FLUKE 25/27 MULTIMETER<br>FIGURE 4-1 | | | STANDARD (STD)<br>OR YELLOW (YEL) | | | |
| A1Ⓐ | MAIN PCB ASSEMBLY<br>FIGURE 4-2 | | | | 1 | | |
| A2Ⓐ | DIGITAL PCB ASSEMBLY<br>FIGURE 4-3 | | | | 1 | | |
| BT1 | BATTERY, 9 VOLT | 614487 | 89536 | 614487 | 1 | 1 | |
| F1 | FUSE, FIBER, 3A, 600V | 475004 | 71400 | BBS-3 | 1 | 5 | |
| F2 | FUSE, 630MA, 250V, (1 FOR SPARE) | 658658 | 89536 | 658658 | 2 | 5 | |
| | FUSE, 630MA, 250V | 658658 | 89536 | 658658 | REF | | |
| F3 | FUSE, 20A, 600V | 643684 | 89536 | 643684 | 1 | 5 | |
| H1 | WASHER, TEFLON | 696591 | 89536 | 696591 | 1 | | |
| H2 | SCREW, 4-20 X 3/8, BLK ZINC | 682310 | 89536 | 682310 | 2 | 2 | |
| H3 | SCREW, PNH W/LK, 4-40 X 5/16 | 721670 | 89536 | 721670 | 4 | | |
| H4 | SCREW, THD FORM, HI/LOW 3/8 | 448456 | 89536 | 448456 | 3 | | |
| H5 | SCREW, PH, 4-40 X 1/4, BLK ZINC | 733170 | 89536 | 733170 | 4 | | |
| H6 | SCREW, PH, 6-32 X 3/8 | 682070 | 89536 | 682070 | 4 | 4 | |
| H7 | SCREW, 6-20 X 1.256 | 733394 | 89536 | 733394 | 4 | 4 | |
| H8 | SCREW, 4-40 X 1 | 157008 | 89536 | 157008 | 2 | | |
| MP1 | CASE, TOP | | | | 1 | | |
| | FLUKE 25 STD | 739912 | 89536 | 739912 | | | |
| | FLUKE 25 YEL | 744490 | 89536 | 744490 | | | |
| | FLUKE 27 STD | 659946 | 89536 | 659946 | | | |
| | FLUKE 27 YEL | 744508 | 89536 | 744508 | | | |
| MP2 | KNOB, SWITCH | | | | 1 | | |
| | STD | 654012 | 89536 | 654012 | | | |
| | YEL | 744466 | 89536 | 744466 | | | |
| MP3 | SHIELD, BOTTOM | 654079 | 89536 | 654079 | 1 | | |
| MP4 | O-RING, KNOB | 705947 | 89536 | 705947 | 1 | | |
| MP5 | SPRING, DETENT | 654046 | 89536 | 654046 | 1 | | |
| MP6 | RING, RETAINING | 697078 | 89536 | 697078 | 1 | | |
| MP7 | DECAL, CASE TOP | | | | 1 | | |
| | FLUKE 25 STD | 654475 | 89536 | 654475 | | | |
| | FLUKE 27 STD | 659466 | 89536 | 659466 | | | |
| | FLUKE 25 YEL | 744557 | 89536 | 744557 | | | |
| | FLUKE 27 YEL | 744565 | 89536 | 744565 | | | |
| MP8 | SHIELD SUPPORT, TOP | 654038 | 89536 | 654038 | 1 | | |
| MP9 | SHIELD, TOP | 654384 | 89536 | 654384 | 1 | | |
| MP10 | CASE, BOTTOM | | | | 1 | | |
| | STD | 654004 | 89536 | 654004 | | | |
| | YEL | 744458 | 89536 | 744458 | | | |
| MP11 | FOOT, CASE | 654335 | 89536 | 654335 | 1 | | |
| MP12 | BAIL, TILT (BRACKET) | | | | 1 | | |
| | STD | 654053 | 89536 | 654053 | | | |
| | YEL | 744474 | 89536 | 744474 | | | |
| MP13 | O-RING, CASE | 654392 | 89536 | 654392 | 1 | 1 | |
| MP14 | COVER, BATTERY | | | | 1 | | |
| | STD | 654061 | 89536 | 654061 | | | |
| | YEL | 744482 | 89536 | 744482 | | | |
| MP15 | O-RING, BATTERY | 697185 | 89536 | 697185 | 1 | 1 | |
| MP16 | HOLDER, BATTERY | | | | 1 | | |
| | STD | 660985 | 89536 | 660985 | | | |
| | YEL | 744615 | 89536 | 744615 | | | |
| MP17 | SHAFT, SWITCH EXTENSION | 655894 | 89536 | 655894 | 1 | | |
| MP18 | SUPPORT, LCD INTERCONNECT | 683664 | 89536 | 683664 | 1 | | |
| MP19 | MASK, LCD | | | | | | |
| | FLUKE 25 | 654020 | 89536 | 654020 | | | |
| | FLUKE 27 | 661025 | 89536 | 661025 | | | |

Table 4-1. 25/27 Final Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| MP20 | CONNECTOR, ELASTOMERIC | 682500 | 89536 | 682500 | 2 | 2 | |
| MP21 | DECAL, WARNING | | | | 1 | | |
| | STD | 685719 | 89536 | 685719 | | | |
| | YEL | 744607 | 89536 | 744607 | | | |
| MP23 | TEST LEAD SET | 642033 | 89536 | 642033 | 1 | | |
| MP25 | CLIP, BLACK ALLIGATOR | 738047 | 89536 | 738047 | 1 | | |
| MP26 | CLIP, RED ALLIGATOR | 738120 | 89536 | 738120 | 1 | | |
| S3-S6 | SWITCH, MOMENTARY | | | | 1 | 1 | |
| | FLUKE 25 | 654343 | 89536 | 654343 | | | |
| | FLUKE 27 | 659847 | 89536 | 659847 | | | |
| TM1 | INSTRUCTION MANUAL, 25/27 | 738088 | 89536 | 738088 | 1 | | |
| U3 | LIQUID CRYSTAL DISPLAY (LCD) | 654293 | 89536 | 654293 | 1 | | |
| | RECOMMENDED SPARE PARTS KIT, 25/27 (CUSTOMER'S OPTION) | 744943 | 89536 | 744943 | AR | | |

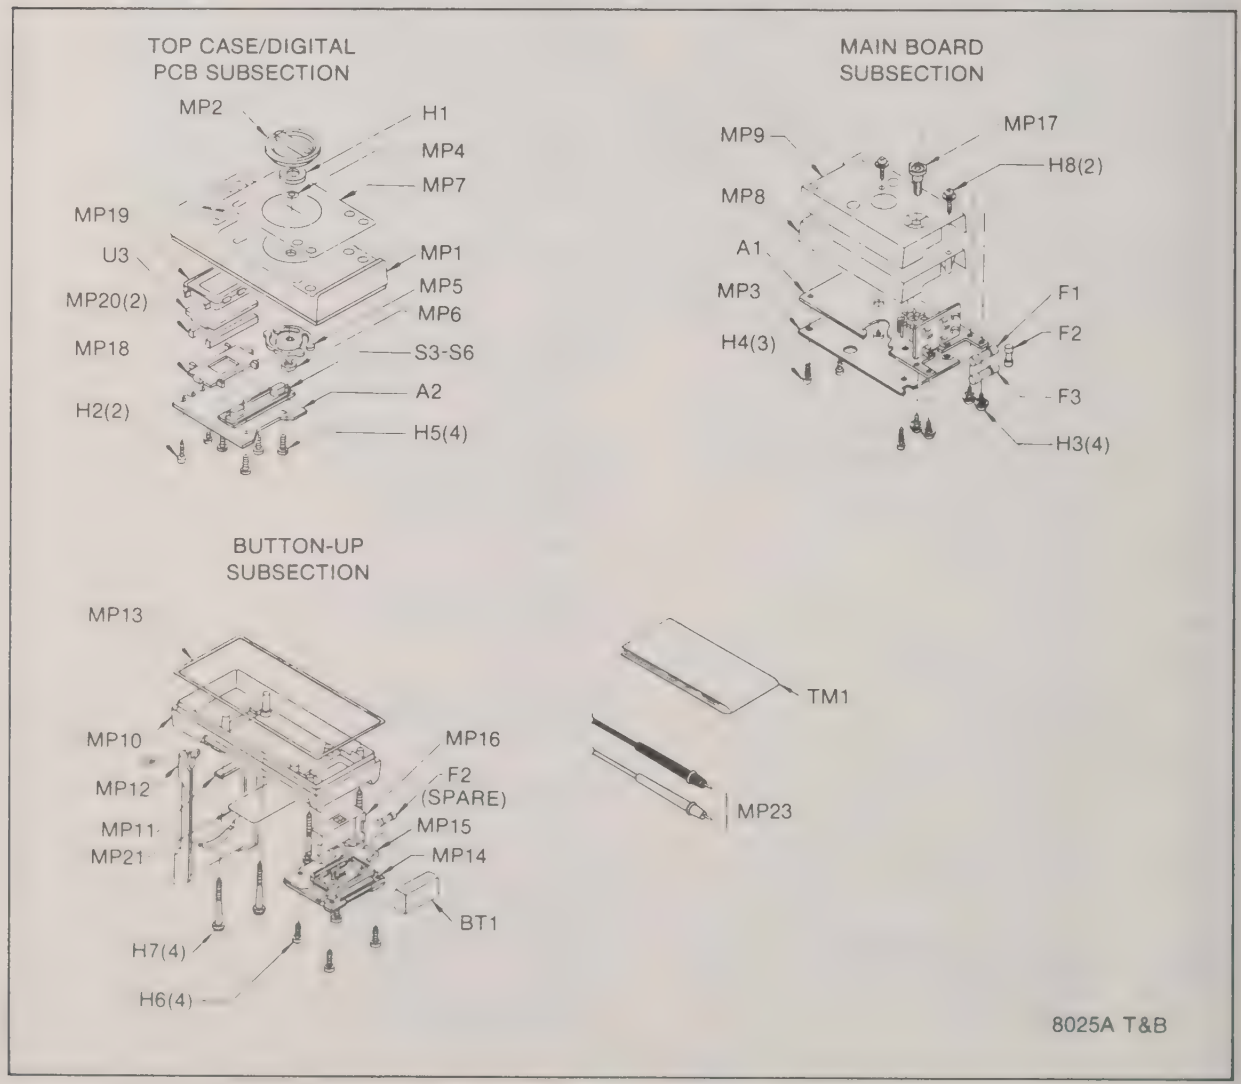


Figure 4-1. 25/27 Final Assembly

**Table 4-2. A1 Main PCB Assembly**

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| A1 | MAIN PCB ASSEMBLY FIGURE 4-2 | | | | REF | | |
| A3 | FUSE CIRCUIT BOARD | 655910 | 89536 | 655910 | 1 | | |
| AR1Ⓐ | IC, OP AMP, ICL7611 | 721928 | 89536 | 721928 | 1 | 1 | |
| C3 | CAP, POLYES, .022uf +/-10%, 1000V | 448183 | 55112 | 0.22/10/1000-7 | 1 | | |
| C4,10 | CAP, VAR, .25-1.5pf, 1700V | 721480 | 89536 | 721480 | 2 | 1 | |
| C6 | CAP, CER, VAR, 2.5-7pf, 100V | 714600 | 51406 | TZ03Z070Y | 1 | | |
| C7 | CAP, CER, 430pf +/-5%, 50V | 732644 | 89536 | 732644 | 1 | | |
| C8 | CAP, CER, VAR, 6-50pf, 50V | 714618 | 51406 | TZ032500Y | 1 | | |
| C9 | CAP, CER, 5100pf +/-2%, 50V | 732651 | 89536 | 732651 | 1 | 1 | |
| C11 | CAP, POLYCARB, .027uF +/-5%, 63V | 733444 | 89536 | 733444 | 1 | 1 | |
| C16 | CAP, TA, 10uF +/-20%, 10V | 714766 | 89536 | 714766 | 1 | | |
| C17 | CAP, CER, 47pf +/-20%, 50V | 706705 | 89536 | 706705 | 1 | | |
| C18,19 | CAP, POLYCARB, 0.027UF +/-10%, 63V | 720979 | 89536 | 720979 | 2 | 1 | |
| C20 | CAP, POLYES, 0.47uf +/-10%, 50V | 697409 | 89536 | 697409 | 1 | | |
| C21 | CAP, POLYPRO, .033uf +/-10%, 63V | 721050 | 89536 | 721050 | 1 | | |
| C22,36 | CAP, POLYES, 0.01uf +/-10%, 50V | 715037 | 89536 | 715037 | 2 | | |
| C23,37 | CAP, TA, 22uF +/-20%, 10V | 658971 | 89536 | 658971 | 2 | | |
| C30 | CAP, CER, 4.0pf +/-0.25pf, 1500V | 714535 | 89536 | 714535 | 1 | 1 | |
| C31,32 | CAP, CER, 0.22uF +80-20%, 50V | 733386 | 89536 | 733386 | 4 | | |
| C33,40 | CAP, CER, 0.22uF +80-20%, 50V | 733386 | 89536 | 733386 | REF | | |
| C34 | CAP, POLYEST, .001UF +/-20%, 630V | 740126 | 89536 | 740126 | 1 | | |
| C35 | CAP, POLYCARB, 1000pf +/-20%, 63V | 721472 | 89536 | 721472 | 1 | | |
| C38,39 | CAP, POLYES, 0.1uf +/-10%, 50V | 649913 | 89536 | 649913 | 2 | | |
| C41,42 | CAP, CER, 10pf +/-20%,50V | 721589 | 89536 | 649913 | 2 | | |
| C43 | CAP, CER, 220pf +/-20%, 50V | 740654 | 89536 | 740654 | 1 | | |
| C48 | CAP, POLYCARB, .033uF +/-5%, 63V | 733451 | 89536 | 733451 | 1 | 1 | |
| C49 | CAP, CER, .022uf, +80-20%, 500V | 740340 | 89536 | 740340 | 1 | | |
| CR1-5 | DIODE, SI, 1K PIV, 1.0A | 707075 | 89536 | 707075 | 4 | | |
| CR6 | DIODE, FIELD EFFECT | 723817 | 17856 | JPAD10 | 1 | 1 | |
| CR7 | DIODE, SI, PIV=75V | 659516 | 03508 | 1N4448 | 1 | 1 | |
| L1 | COIL ASSEMBLY, RF | 738054 | 89536 | 738054 | 1 | | |
| MP1 | FENCE, SHIELD | 722280 | 89536 | 722280 | 1 | | |
| P1 | CONNECTOR, 18 POSITION | 707646 | 89536 | 707646 | 1 | | |
| Q1,2,11 | TRANSISTOR, SI, NPN,SELECTED | 685404 | 89536 | 685404 | 3 | | |
| Q12 | TRANSISTOR, SI, JFET, N-CHAN, TO-92 | 721936 | 17856 | J2660 | 2 | | |
| Q13 | TRANSISTOR, JUNCTION FIELD EFFECT (JFET) | 723734 | 89536 | 723734 | 1 | 1 | |
| Q15 | TRANSISTOR, SI, PNP, TO-92 | 698233 | 07263 | S44321 | 1 | | |
| R1 | RES, CC, 220K +/-10%, 1W | 714485 | 01121 | GB2241 | 1 | | 1 |
| R2 | RES, FUSIBLE (USE EXACT REPLACEMENT) | 650085 | 89536 | 650085 | 1 | 1 | |
| R3 | RES, MF, 301K +/-1%, 1/8W | 655274 | 78487 | SM553013F | 1 | | 1 |
| R4 | RES, MF, 332K +/-1%, 1/8W | 655217 | 78487 | SM553323F | 1 | | |
| R5 | RES, CC, 100K +/-5%, 2W | 696567 | 01121 | HB1045 | 1 | | |
| R6,25,33 | RES, CF, 100K +/-5%, 1/4W | 658963 | 78488 | CF1-41045 | 3 | | 1 |
| R7 | RES, CER, VAR, 1K +/-20%, 0.3W | 706655 | 89536 | 706655 | 1 | | |
| R9 | RES, MF, 402K +/-.1%, 1/8W | 714329 | 78487 | SM5540238 | 1 | 1 | |
| R10 | RES, MF, 44.8 +/-.1%, 1/8W | 714311 | 89536 | 714311 | 1 | 1 | |
| R12 | RES, MF, 14.3K +/-1%, 1/8W | 721803 | 89536 | 721803 | 1 | | |
| R13 | RES, CF, 1.5M +/-5%, 1/4W | 649962 | 78488 | CF1-41555 | 1 | | |
| R14 | RES, MF, 500 +/-.25%, 1/4W | 697557 | 89536 | 697557 | 1 | 1 | |
| R15 | RES, MF, 107K +/-1%, 1/8W | 714295 | 78487 | SM551073F | 1 | | |
| R16 | RES, CF, 1M +/-5%, 1/4W | 649970 | 78488 | CF1-41055 | 3 | | |
| R18 | RES, MF, 412K, +/-1%, 1/8W | 714287 | 78487 | SM554123F | 1 | | |
| R19 | RES, CER, VAR, 100K +/-20%, 0.3W | 658989 | 89536 | 658989 | 1 | | |
| R20 | RES, WW, 4.995 +/-0.25%, 4W | 658948 | 89536 | 658948 | 1 | 1 | |
| R23 | SHUNT, RES, 0.005 +/-0.5%, 10A | 655423 | 89536 | 655423 | 1 | 1 | |
| R26 | RES, MF, 499K +/-1%, 1/8W | 714980 | 78487 | SM554993F | 1 | | |
| R27 | RES, MF, 1.5M +/-1%, 1/8W | 714998 | 78487 | SM551504F | 1 | | |
| R28,29 | RES, CF, 1M +/-5%, 1/4W | 649970 | 78488 | CF1-41055 | REF | | |
| R30 | RES, MF, 20K +/-0.25%, 1/8W | 715029 | 78487 | SM552002C | 1 | 1 | |
| R31,32 | RES, MF, 22.6K, +/-.25%, 1/8W | 715011 | 89536 | 715011 | 2 | 1 | |
| R35 | RES, CF, 4.7K +/-5%, 1/4W | 721571 | 78488 | CF1-44725 | 1 | | |
| R36 | RES, CF, 47K +/-5%, 1/4W | 721787 | 78488 | CF1-44735 | 1 | | |

Table 4-2. A1 Main PCB Assembly (cont)

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| R37 | RES, MF, 5.49K +/-1%, 1/8W | 721795 | 89536 | 721795 | 1 | | |
| R38 | RES, CF, 1.5 +/-5%, 1/4W | 732800 | 78488 | CF1-41525 | 1 | | |
| R39 | RES, CF, 300K +/-5%, 1/4W | 732818 | 78488 | CF1-43045 | 1 | | |
| R40 | RES, CF, 200K +/-5%, 1/4W | 681841 | 78488 | CF1-42045 | 1 | | |
| RJ1-RJ5 | VARISTOR, 10%, 430V | 706838 | 89536 | 706838 | 5 | 1 | |
| RT1,2 | THERMISTOR, RECT, POS., 1K +/-40% | 446849 | 50157 | 180010200 | 2 | 1 | |
| S1 | SWITCH, UPPER | 654301 | 89536 | 654301 | 1 | 1 | |
| S2 | SWITCH, LOWER | 654319 | 89536 | 654319 | 1 | 1 | |
| U1Ⓐ | IC, CHIP ASSEMBLY, 8025 AP25 | 700112 | 89536 | 700112 | 1 | 1 | |
| U7 | DIODE, SI, RECT.BRIDGE, 1A | 418582 | 83003 | VM08 | 1 | 1 | |
| VR1 | DIODE, ZENER, BANDGAP | 729194 | 89536 | 729194 | 1 | 1 | |
| W1 | RES, 0 OHM | 682575 | 89536 | 682575 | 1 | | |
| W3 | WIRE, JUMPER | 722967 | 89536 | 722967 | 1 | | |
| XBT1 | BATTERY CONNECTOR | 655100 | 89536 | 655100 | 1 | | |
| | PCB SUPPORT | 656108 | 89536 | 656108 | 1 | | |
| XF1 | FUSECLIP, 600V | 659524 | 89536 | 659524 | 2 | | |
| XF2 | FUSECLIP, 5X20mm | 697086 | 89536 | 697086 | 2 | | |
| XF3 | FUSECLIP, 600V | 707190 | 89536 | 707190 | 2 | | |
| Y1 | CRYSTAL, 32.768KHZ, +/-1%, 3X8MM | 643031 | 89536 | 643031 | 1 | 1 | |
| Z1 | RES. NETWORK, DIVIDER | 616938 | 89536 | 616938 | 1 | 1 | |

1 WW=WIREWOUND
MF=METAL FILM
CF=CARBON FILM
CC=COMPOSITION

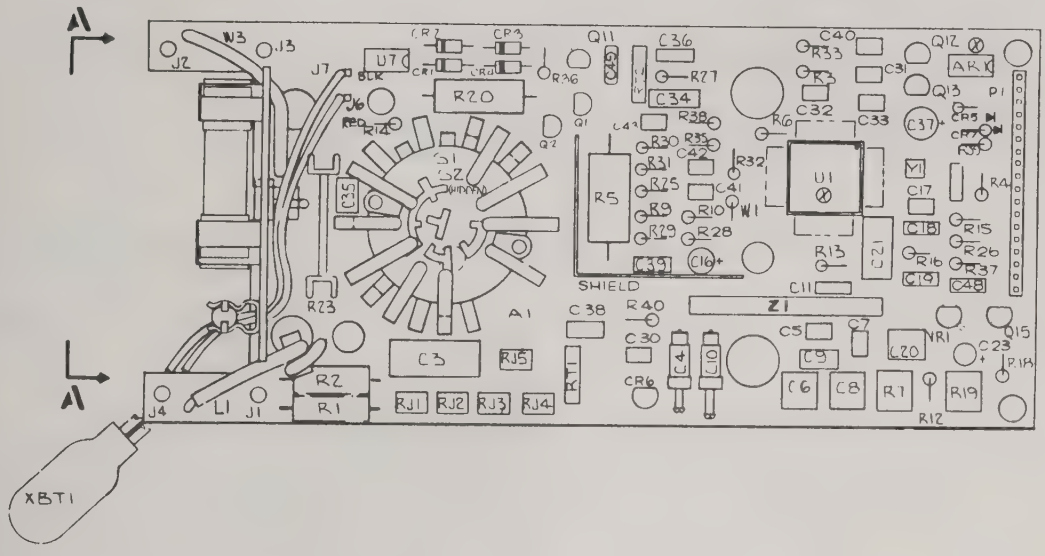


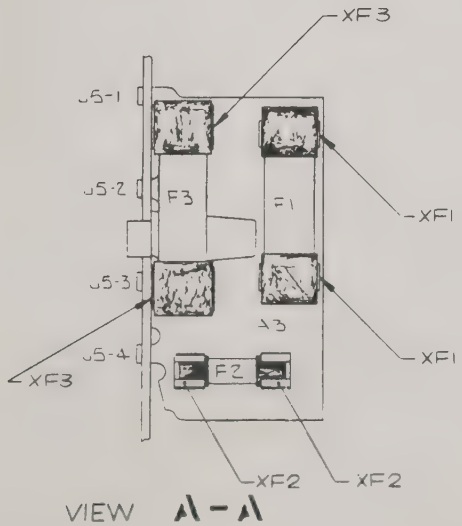


8025A-1601

**Figure 4-2. A1 Main PCB Assembly**

Table 4-3. A2 Digital PCB Assembly

| REF DES | DESCRIPTION | FLUKE STOCK NO. | MFG SPLY CODE | MFG PART NO. | TOT QTY | REC QTY | NOTE |
|---|---|---|---|---|---|---|---|
| A2⊘ | DIGITAL PCB ASSEMBLY<br>FIGURE 4-3 | | | | REF | | |
| C12,13 | CAP, CER, 0.22uf +80-20%, 50V, Z5U | 733386 | 89536 | 733386 | 6 | | |
| C44-47 | CAP, CER, 0.22uf +80-20%, 50V, Z5U | 733386 | 89536 | 733386 | REF | | |
| J8 | SOCKET, SNGL ROW, 18 CONTACT | 707026 | 51406 | SS-109-1-18C | 1 | | |
| LS1 | TRANSDUCER, AUDIO | 602490 | 51406 | PKM24-4A1 | 1 | | |
| U2⊘ | IC, CMOS, 4 BIT MICROCOMPUTER | 685628 | 89536 | 685628 | 1 | | |

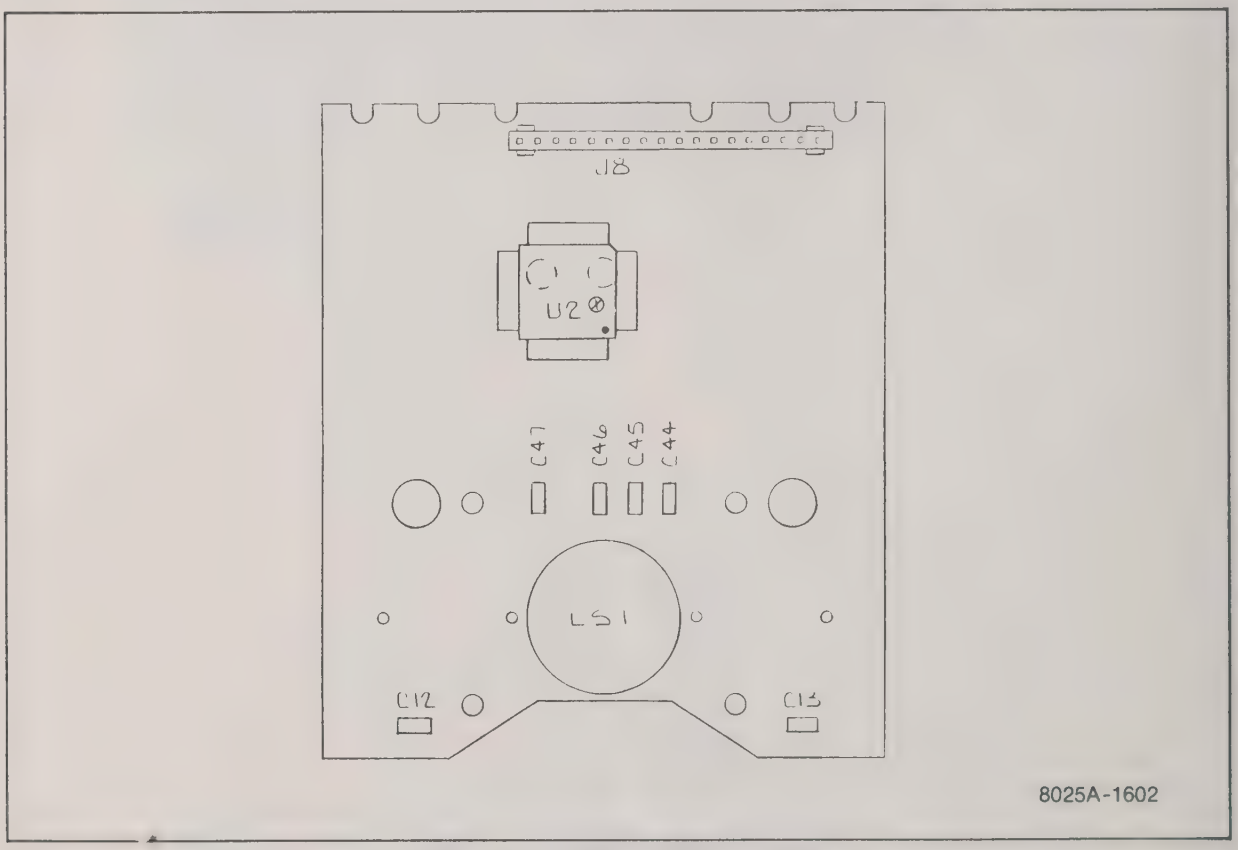


Figure 4-3. A2 Digital PCB Assembly

## Federal Supply Codes

01121
Allen-Bradley Co.
Milwaukee, Wisconsin

02735
RCA - Corp - Solid State Div.
Sommerville, New Jersey

04713
Motorola Inc. Semiconductor Products
Phoenix, Arizona

05277
Westinghouse Electric Corp.
Semiconductor Div.
Youngwood, Pennsylvania

07910
Teledyne Semiconductor
Formerly Continental Device
Hawthorne, California

09214
G.E. Co. Semiconductor Products Dept.
Power Semiconductor Products OPN Sec.
Auburn, New York

56289
Sprague Electric Co.
North Adams, Massachusetts

71400
Bussmann Mfg.
Div. of McGraw-Edison Co.
St. Louis, Missouri

71590
Centrelab Electronics
Div. of Globe Union Inc.
Milwaukee, Wisconsin

72982
Erie Tech. Products Inc.
Erie, Pennsylvania

73445
Amperex Electronic Corp.
Hicksville, L.I., New York

80031
Electro-Midland Corp., Mepco Div.
A North American Phillips Co.
Morristown, New Jersey

89536
Fluke, John Mfg. Co., Inc.
Seattle, Washington

91506
Augat Inc.
Attleboro, Massachusetts

## USA and International Service Centers

### U.S.A. and Canada

**CA, Burbank**
John Fluke Mfg Co., Inc
(213) 849-4641

**IL, Rolling Meadows**
John Fluke Mfg. Co., Inc
(312) 398-5800

**NJ, Paramus**
John Fluke Mfg Co., Inc
(201) 262-9550

**Canada, Mississauga, ON**
Allan Crawford Associates Ltd
Tel (416) 678-1500

**For more information on Fluke products or Sales Offices you may dial (800) 426-0361 toll-free in most of U.S. From Alaska, Hawaii, or Washington phone (206) 356-5400. From other countries phone (206) 356-5500.**

### Other Countries

**Argentina, Buenos Aires**
Coasin S.A
Tel 552-5248/3485
TLX: 22284 COASN AR

**Australia, Concord**
Elmeasco Instruments Pty Ltd
Tel 736-2688
TLX 25887 ELSCO

**Australia, Mount Waverley**
Elmeasco Instruments Pty Ltd
Tel 233-4044
TLX 36206 ELMVIC

**Australia, Brisbane**
Elmeasco Instruments Pty Ltd
Tel 369-8688
TLX 44062 ELMQLD

**Austria, Vienna**
Walter Rekirsch
Elektronische Gerate GmbH & Co
Tel 235555
TLX 134759

**Belgium, Brussels**
Fluke (Belgium) SA/NA
Tel 2164090
TLX 26312

**Brazil, Sao Paulo**
Fluke Brasil-Industria E Comercio Ltda
Tel 421-5477
TLX 1135589 FLKE BR

**Chile, Santiago**
Intronica Chile Ltda
Tel 44940
TLX 240301

**China, Beijing**
Beijing Radio Research Institute
Tel 445612

**Colombia, Bogota**
Sistemas E Instrumentacion. Ltda.
Tel 232-4532
TLX 45787 COASN CO

**Denmark, Ballerup**
Tage Olson A/S
Tel 658111
TLX 35293 TOAS DK

**Ecuador, Quito**
Proteco Coasin Cia . Ltda
Tel 529684, 526759
TLX 2865 PROTEC ED

**Egypt, Cairo**
Electronic Engineering Liaison Office
Tel 695705
TLX 23082

**England, Watford, Herts**
Fluke (Great Britain) LTD
Tel 40511
TLX 934583

**Finland, Espoo**
Instrumentarium Electronics
Tel 5281
TLX 124426 HAVUL SF

**France, Paris**
M B Electronique S.A
Tel 9568131
TLX 695414

**Greece, Athens**
Hellenic Scientific Representations
Tel 7211140
TLX 219330

**Hong Kong, Wanchai**
Schmidt & Co (H.K.) Ltd
Tel 8330-222
TLX 74766 SCHMC HX

**India, Bombay**
Hinditron Services Pvt Ltd
Tel 8121316
TLX 112326 HSPL IN

**India, Bangalore**
Hinditron Services Pvt Ltd
Tel 33139
TLX 0845741 HSPL IN

**India, New Delhi**
Hinditron Services Pvt Ltd
Tel 619118
TLX 0314890 SRMP IN

**Indonesia, Jakarta Selatan**
P T Dwi Tunggal Jaya Sakti
Tel 716374
TLX 47308 DIJS IA

**Israel, Ramat Hasharon**
R D.T Electronics Engineering Ltd
Tel 483216
TLX 32143 RDT IL

**Italy, Milan**
Sistrel S p.A
Tel 6181893
TLX 334643

**Italy, Rome**
Sistrel S p A
Tel 5915551
TLX 680356

**Japan, Tokyo**
John Fluke Mfg Co., Inc
Japan Branch
Tel 434-0185
TLX 2424331 (FLUKJPJ)

**Korea, Seoul**
Electro-Science Korea Co
Tel 583-7703
TLX 25381 ESKOREA

**Malaysia, Petaling Jaya**
Mecomb Malaysia SDN BHD
Tel 743422
TLX MA37764 MECOMB

**Mexico, Mexico D.F.**
Electronica y Tecnologia
Avanzada S A de C V (ETA)
Tel 393 09 02 or 393 57 62
TLX 172697 BIOSME

## USA and International Service Centers (cont)

**Netherlands, Tilburg**
Fluke (Nederland) B.V
Tel 352455
TLX 52683

**New Zealand, Auckland**
McLean Information Technology, Ltd
Tel 501-801, 501-219
TLX NZ21570 THERMAL

**Norway, Oslo**
Morgenstierne & Co A/S
Tel 356110
TLX. 71719

**Pakistan, Karachi**
International Operations (PAK), Ltd
Tel 221127, 239052
TLX 24494 PIO PK

**Peru, Lima**
Importaciones Y Representaciones
Electronicas S.A
Tel: 288650
TLX 25663 PE IREING

**Philippines, Metro Manila**
Spark Radio & Electronics Corp
Tel: 775192, 704096
TLX 27901 RLA PH

**Portugal, Lisbon**
Decada Espectral Equipamentos
de Electronica, Lda
Tel 2103420
TLX 15515

**Republic of Singapore, Singapore**
Rank O'Connor's (PTE) Limited
Tel 637944, 239052
TLX. RS21023 OCONSIN

**Republic of South Africa, Wynberg**
Fluke S.A. (Pty) Ltd.
Tel 786-3170
TLX 424328

**Spain, Madrid**
Equipos y Sistemas S A
Tel 458-0150
TLX 42856 EYS F

**Sweden, Vallingby**
Teleinstrument AB
Tel 380370
TLX 15770

**Switzerland, Zurich**
Traco Electronic AG
Tel 2010711
TLX 815570 TRCO CH

**Taiwan, Taipei**
Schmidt Electronics Corp
Tel 5013468
TLX: 11111 SCHMIDT
10548 EVERGOFT

**Thailand, Bangkok**
Measuretronix Ltd
Tel: 378-2516
TLX 81143 DEJOBKK TH

**Turkey, Istanbul**
Erkman Elektronik Aletler
Tel 4415461
TLX 24399

**Uruguay, Montevideo**
Coasin Uruguaya S A
Tel 789015
TLX UY6571 OROCUER SA

**Venezuela, Caracas**
Coasin C A.
Tel 239-0967, 239-5079
TLX 21027 EMVEN VE

**West Germany, Ismaning/Munich**
Fluke (Deutschland) GmbH
Tel 96050
TLX 0522472

# Section 5
# Schematic Diagrams


| FIGURE | TITLE | PAGE |
|---|---|---|
| 5-1. | A1 Main PCB and A2 Digital PCB Schematic ..... | 5-2 |

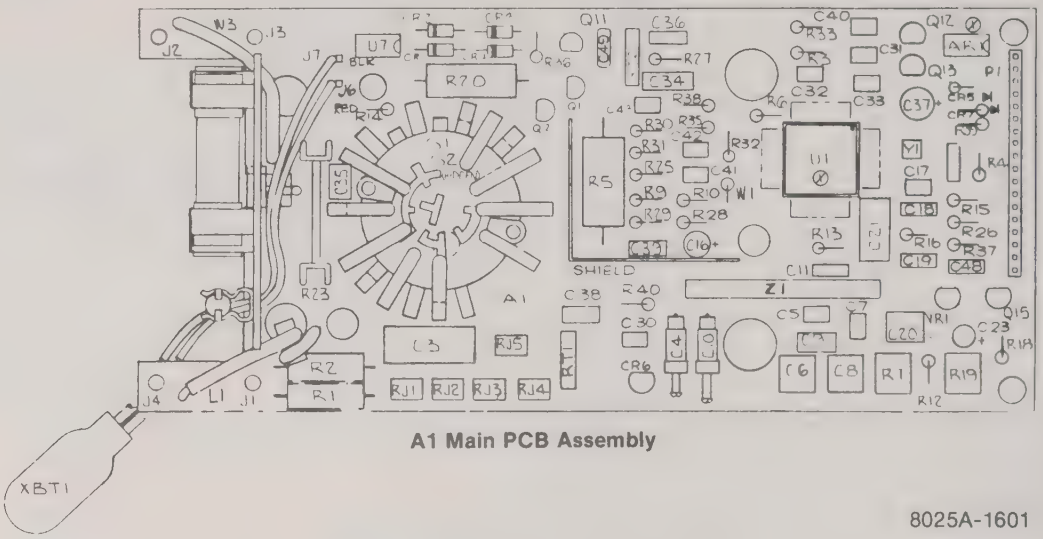


**A1 Main PCB Assembly**

8025A-1601

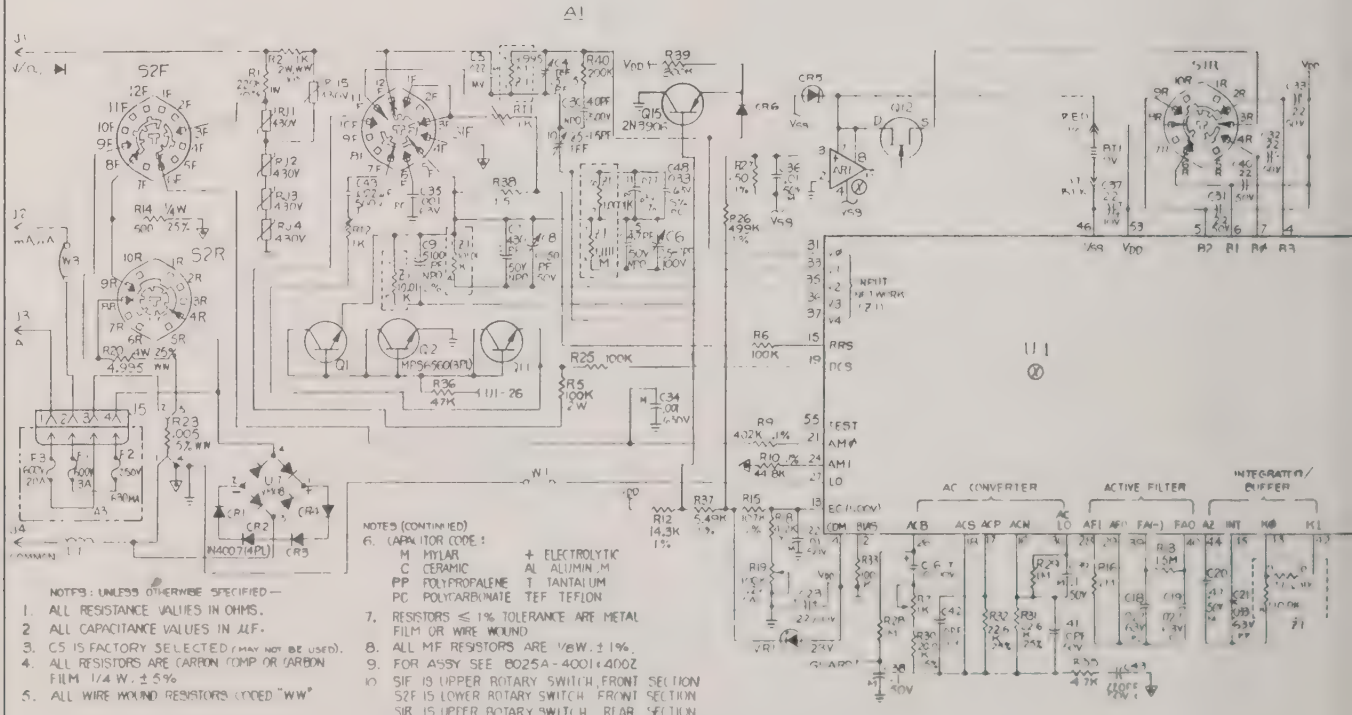

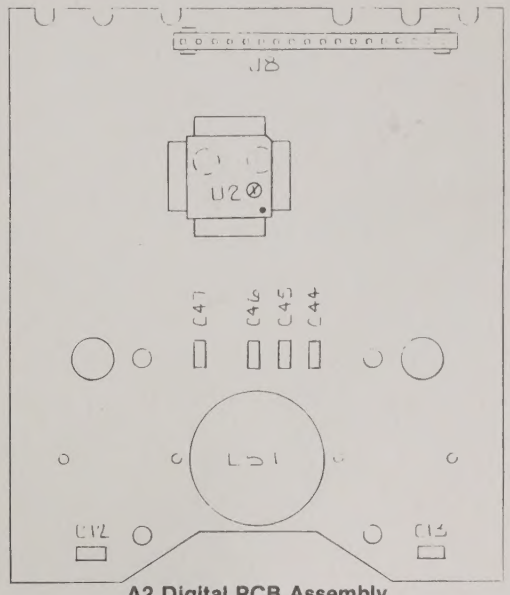


**A2 Digital PCB Assembly**

8025A-1602

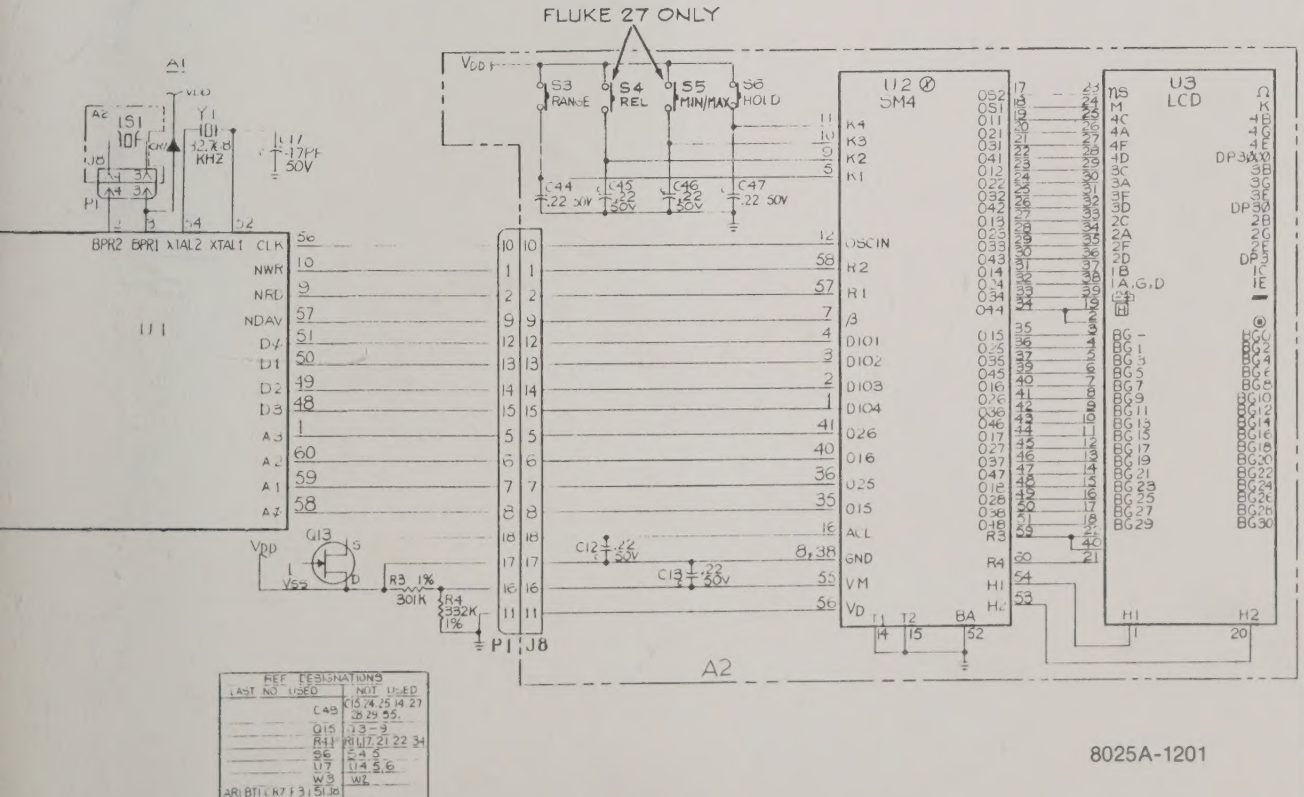


8025A-1201

**Figure 5-1. A1 Main PCB and A2 Digital PCB Schematic**

www.manualsplus.com
1036085